 



<b>Position ID</b>	<b>Part number.</b>	<b>Replaces:</b>	<b>Description</b>
0301	10004491		Burner cap
0302	10004489		Burner cap
0304	10004494		Burner
0305	10004492		Burner
0306	10006471		Electrode
0308	10004496		Venturi nozzle
0309	10004495		Venturi nozzle
0311	10004499		Burner housing
0312	10004497		Burner housing
0313	10006791		Jet
0314	10006797		Jet
0315	12007259		Ignition device
0307	10008211		Screw
0310	10004531		Screw





<b>Position ID</b>	<b>Part number.</b>	<b>Replaces:</b>	<b>Description</b>
0401	10004491		Burner cap
0402	10004490		Burner cap
0404	10004494		Burner
0405	10004493		Burner
0406	10006471		Electrode
0408	10004496		Venturi nozzle
0409	10004495		Venturi nozzle
0411	10004499		Burner housing
0412	10004498		Burner housing
0413	10006791		Jet
0414	10008196		Jet
0415	12007259		Ignition device
0416	10006793		Jet
0407	10004531		Screw

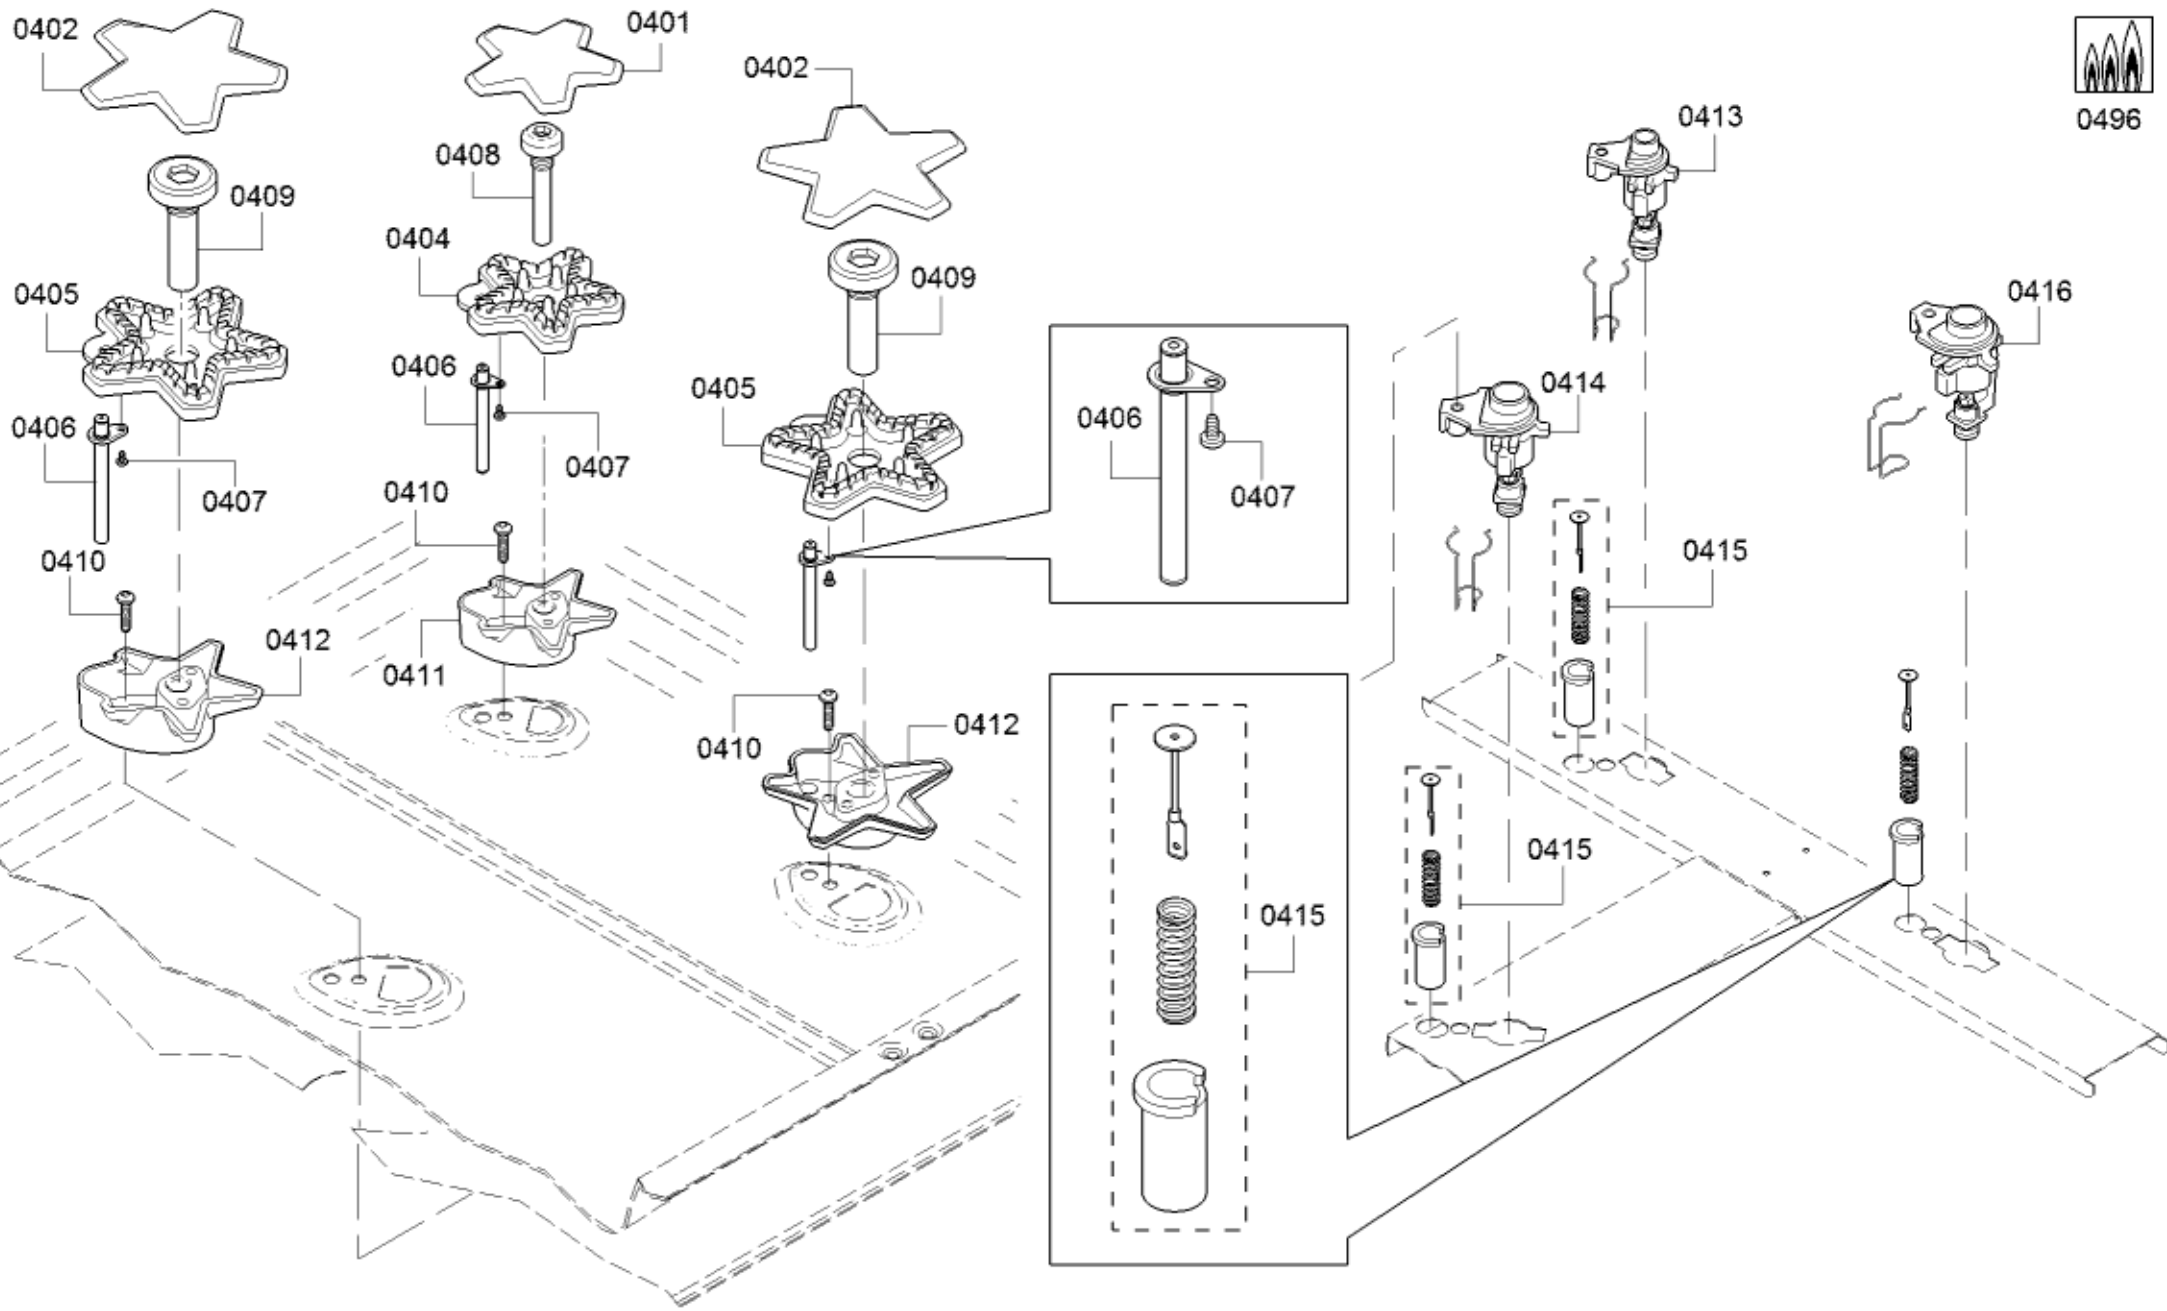

 0199

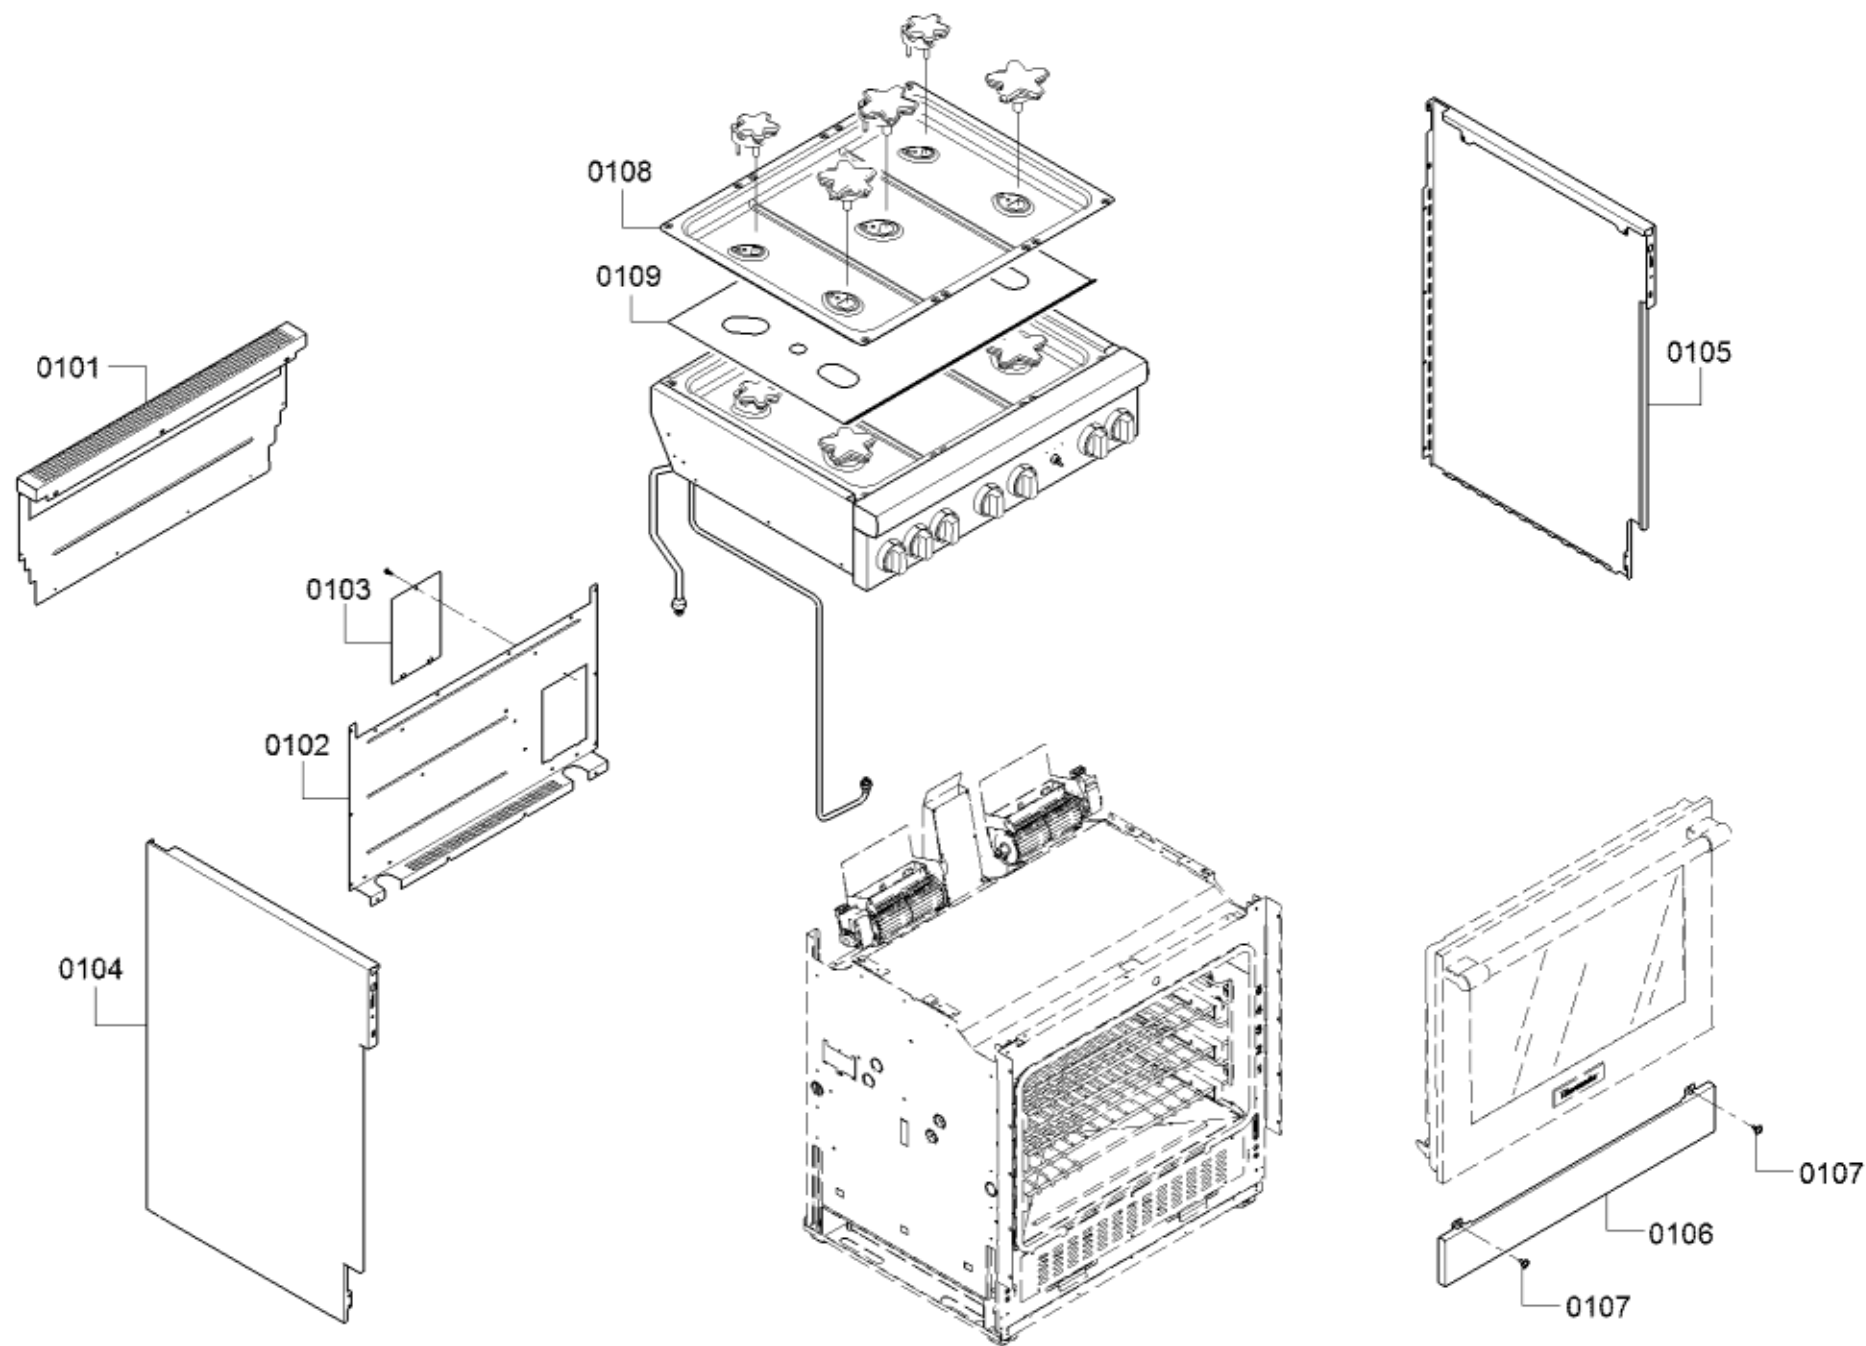


<b>Position ID</b>	<b>Part number.</b>	<b>Replaces:</b>	<b>Description</b>
0101	00146128		Back wall panel
0102	11031592		Back panel
0103	00649417	00752161	Cover
0104	00719241		Panel side
0105	00719242		Panel side
0106	00770922		Cover
0107	00623741		Screw
0108	00714354		Hob top
0109	10008198		Heat shield

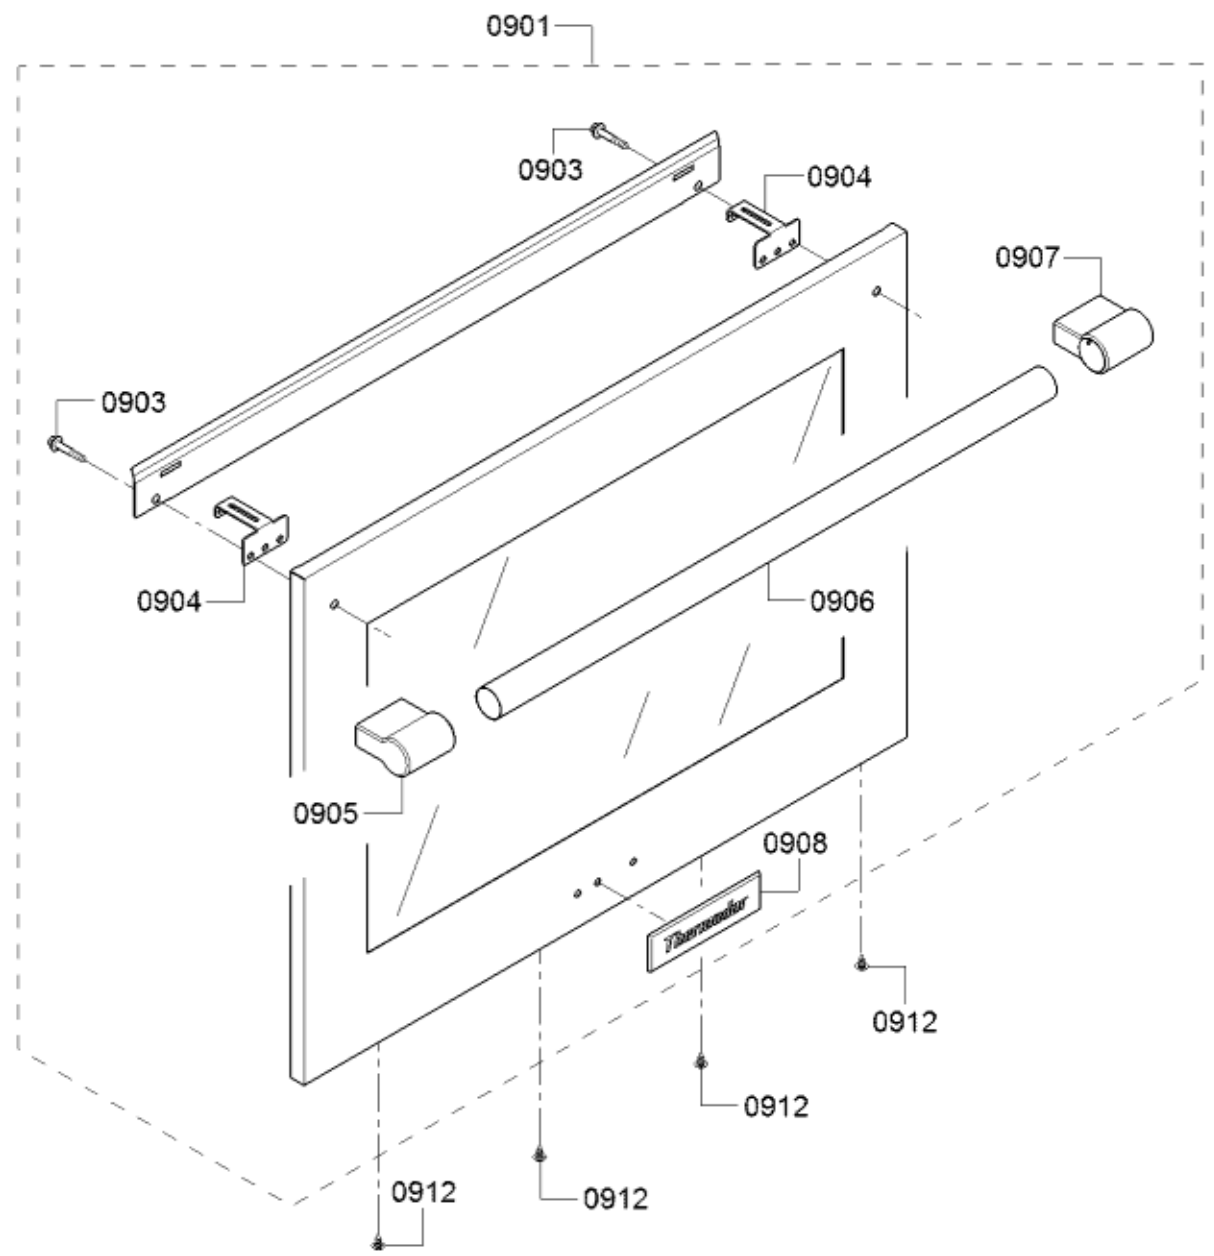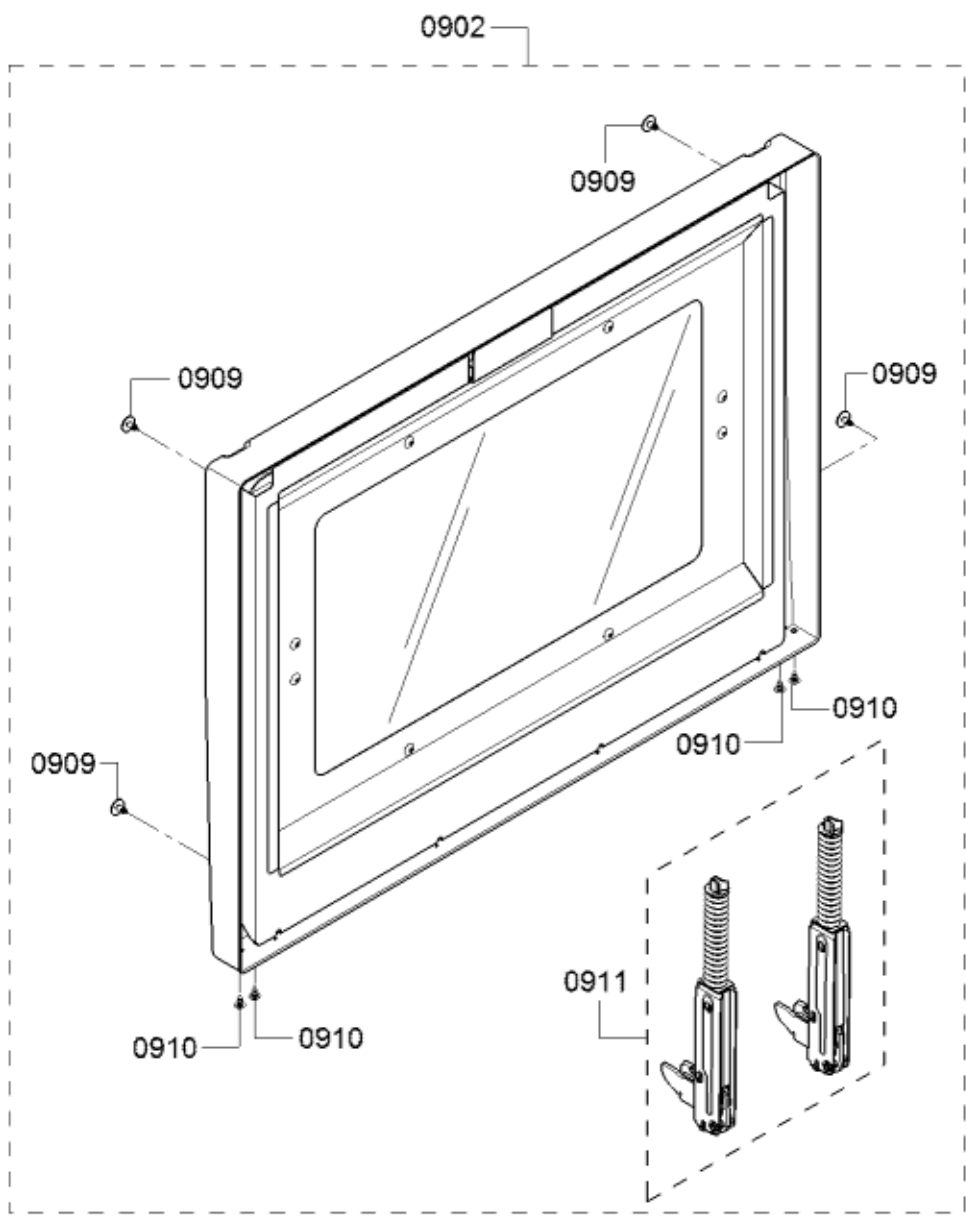  


<b>Position ID</b>	<b>Part number.</b>	<b>Replaces:</b>	<b>Description</b>
0901	20000063		Door-outer
0902	20000065		Door-inner
0903	10010275		Screw
0905	10011397		Handle-cap shaped
0906	11032089		Handle
0907	10011397		Handle-cap shaped
0908	10010271		Plate
0909	10010274		Screw
0910	10008228		Screw
0911	10011376		Hinge
0912	10011608		Screw
0904	10011398		Bracket




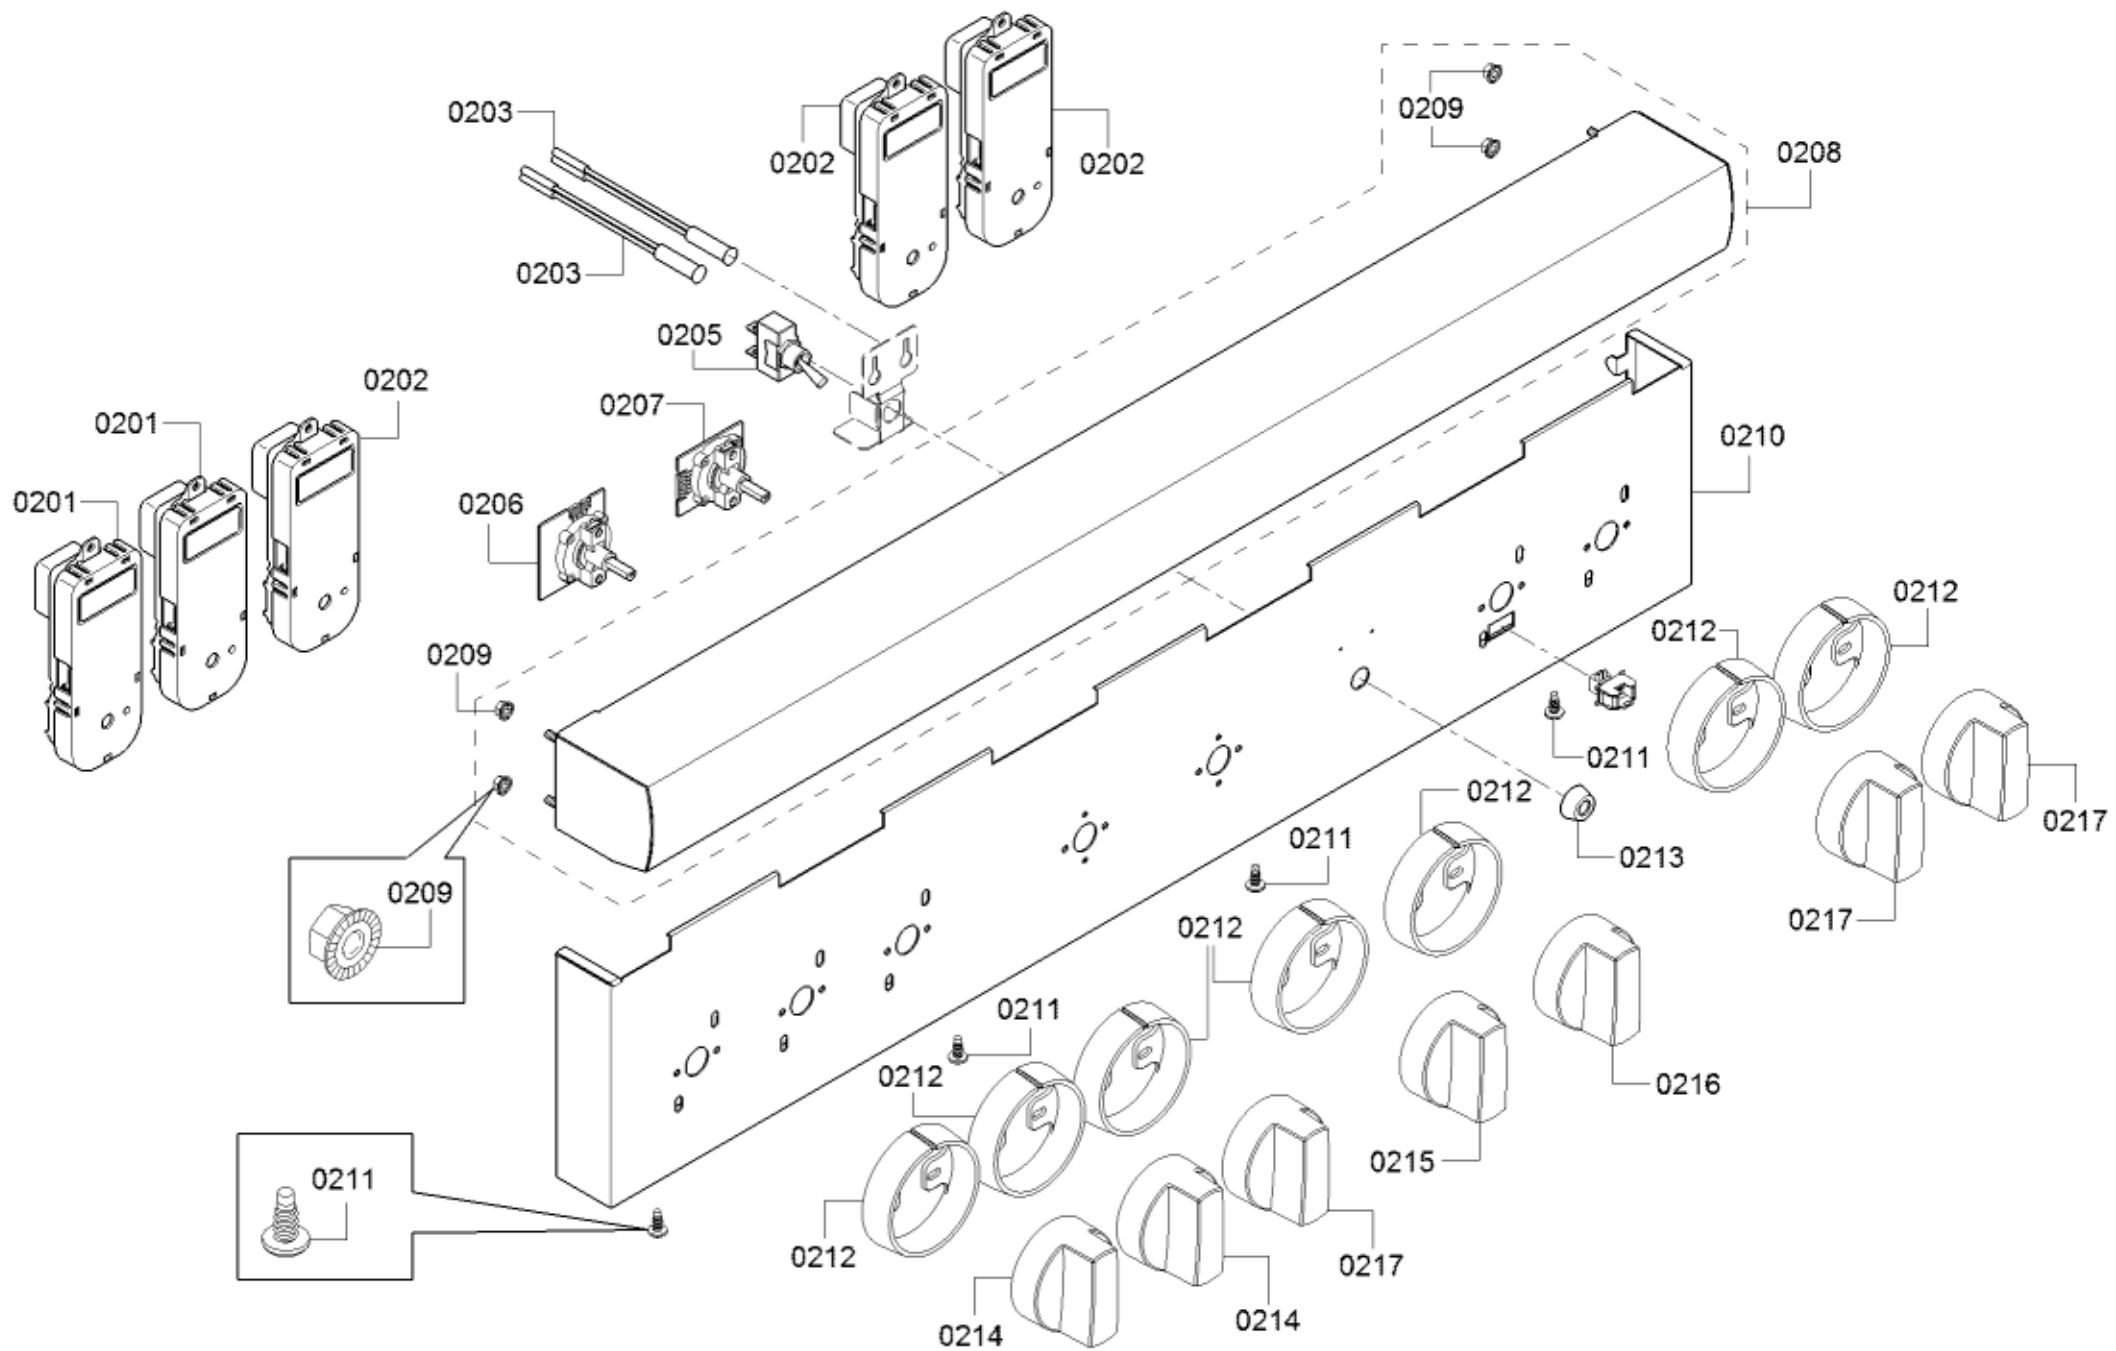 


<b>Position ID</b>	<b>Part number.</b>	<b>Replaces:</b>	<b>Description</b>
0201	12024418		Module-relay
0202	12024417		Module-relay
0203	00617931		Display
0205	00609115		Switch
0206	10010239		Knob
0207	10010238		Encoder
0208	23000458		Support
0210	00146143		Panel-facia
0211	10008212		Screw
0212	10008201		Ring
0213	00418122		Ring
0214	10008199		Knob
0215	10010237		Knob
0216	10010236		Knob
0217	10008200		Knob
0209	00623615		Nut

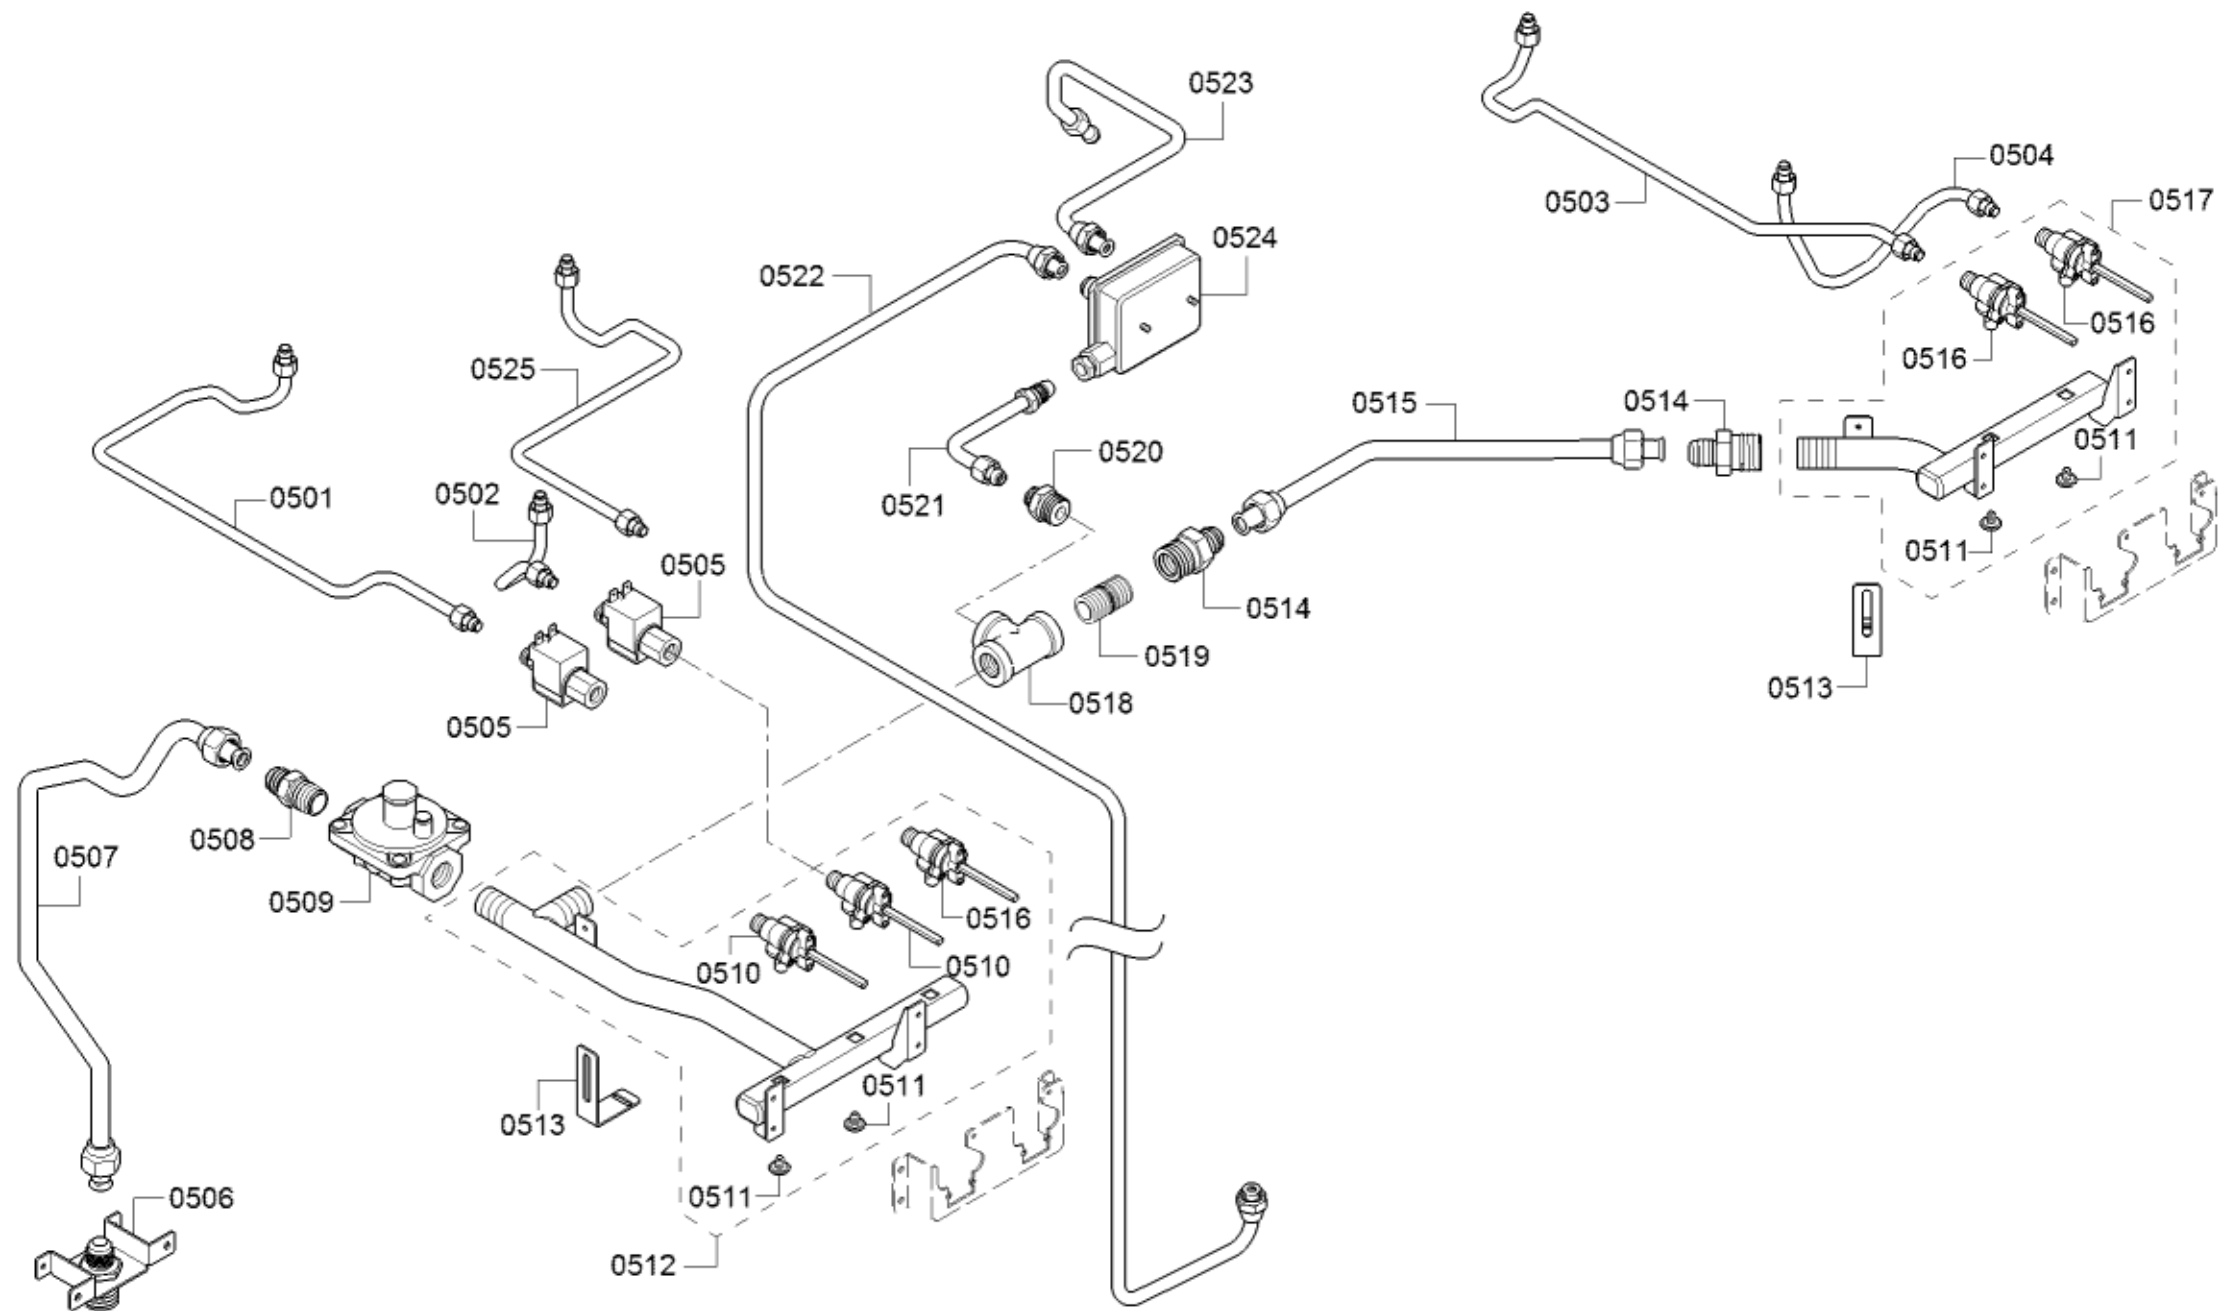 

<b>Position ID</b>	<b>Part number.</b>	<b>Replaces:</b>	<b>Description</b>
0501	11032262		Gas tap
0502	11032261		Gas tap
0503	11032265		Gas tap
0504	11032264		Gas tap
0505	00423093		Valve
0506	10010197		Bracket
0507	11030912		Gas tap
0508	10010200		Adapter
0509	00754658		Regulator-pressure
0510	10003806		Valve
0512	20000071		Manifold
0513	10009569		Bracket
0514	10010270		Pipe connection piece
0515	11032400		Tube
0516	10009155		Valve
0517	00779008		Manifold
0518	00601543		Connection
0519	10010307		Adapter
0519	10011560		Connection piece
0520	00427661		Connection piece
0521	12026926		Tube
0522	11030964		Gas tap
0523	12026924		Tube
0524	00605061		Valve-two way
0525	20000072		Gas tap
0511	00420807		Screw

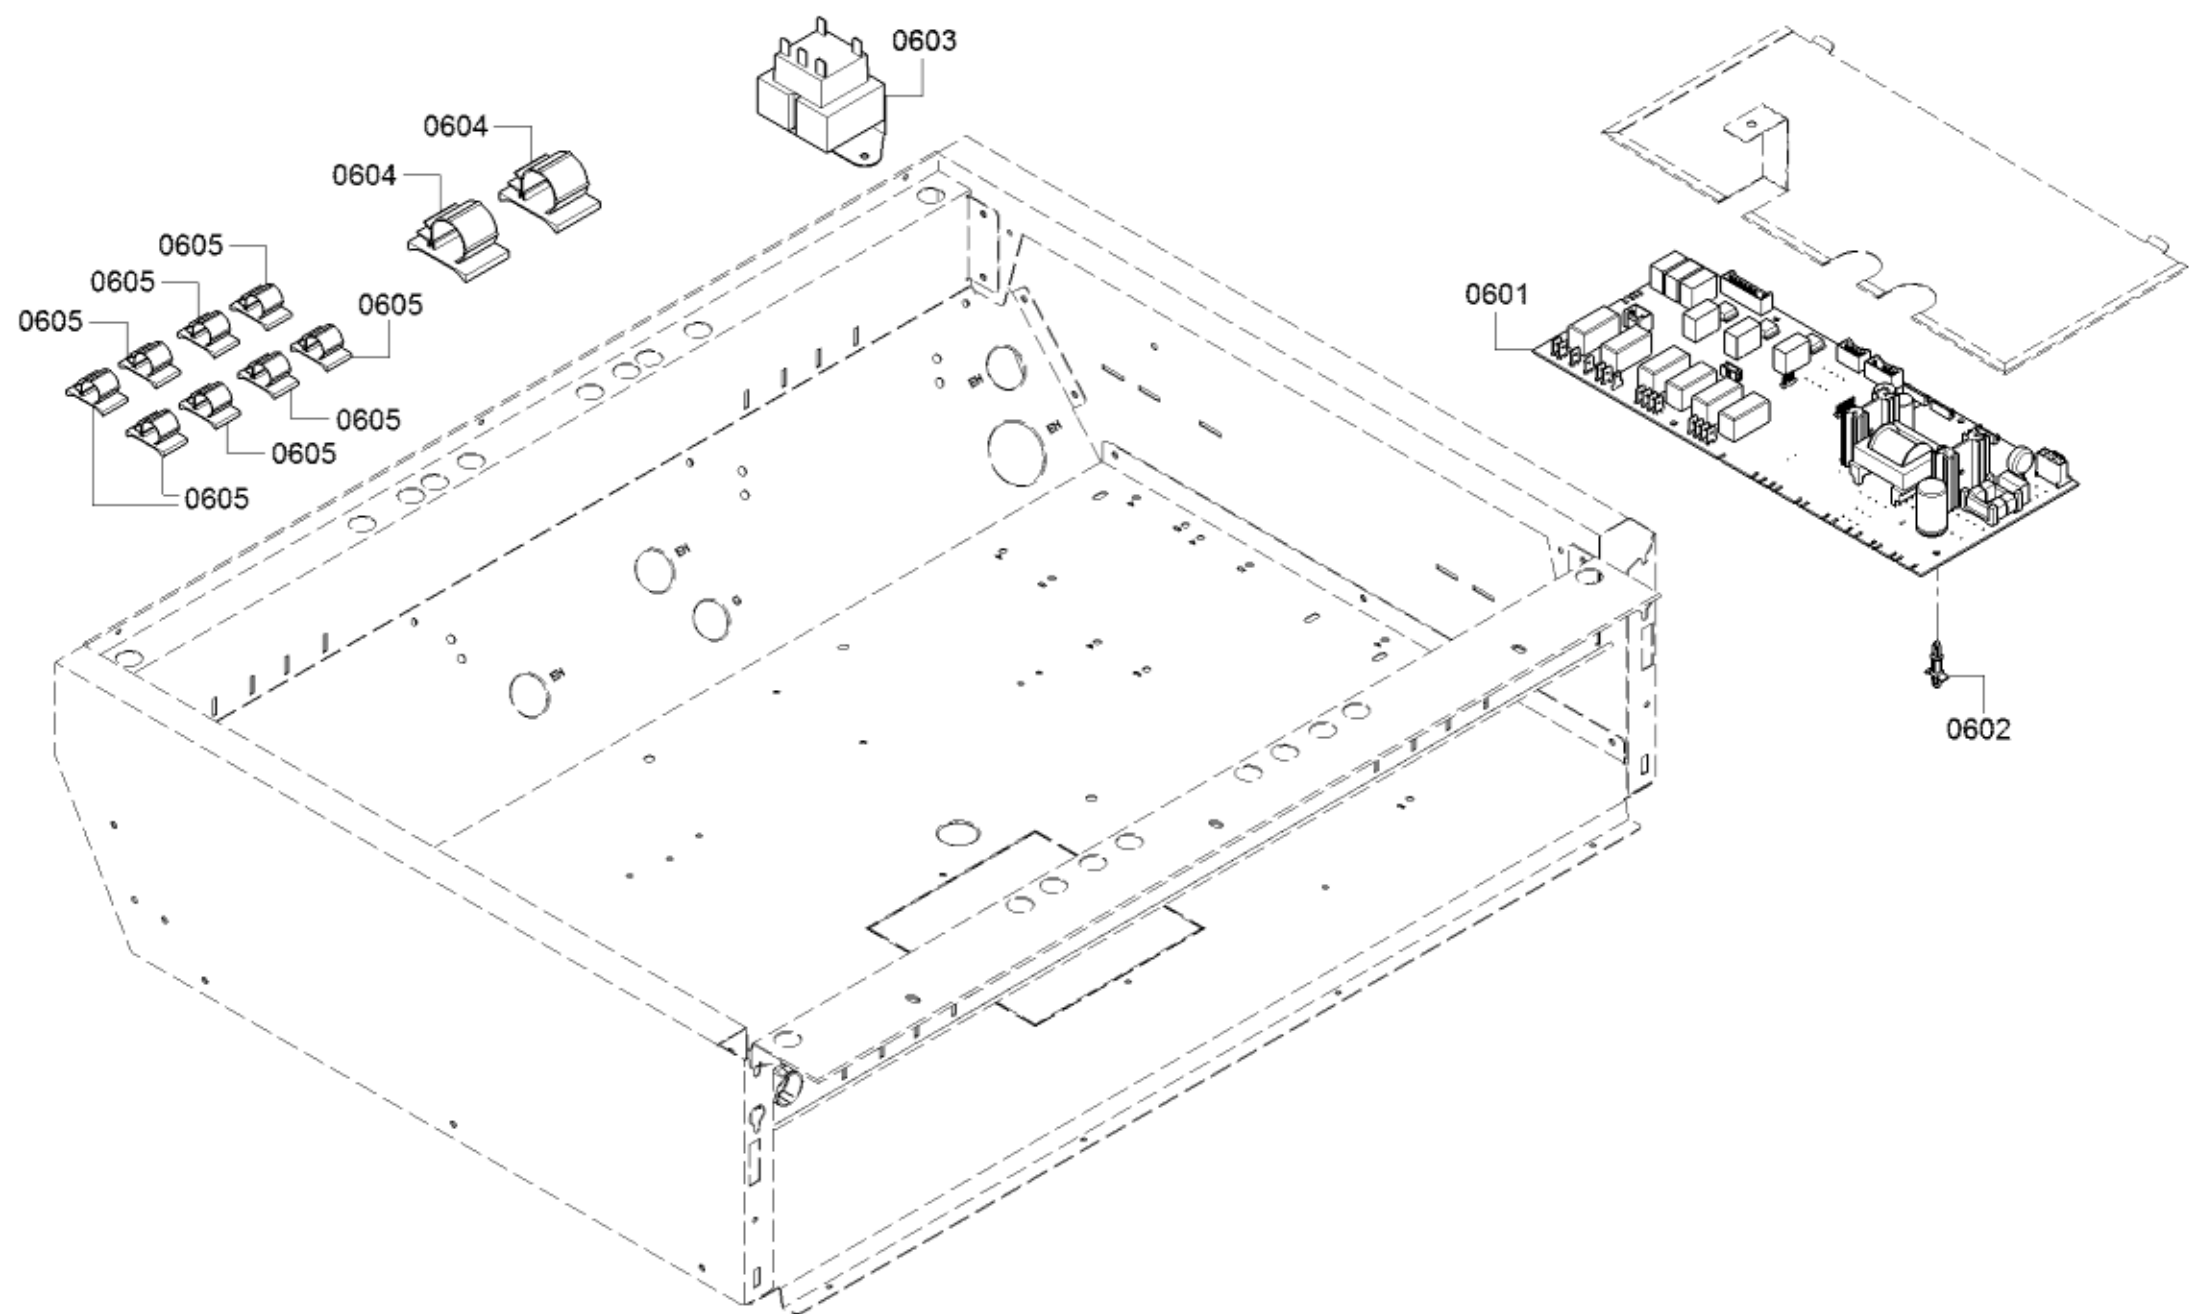 


<b>Position ID</b>	<b>Part number.</b>	<b>Replaces:</b>	<b>Description</b>
0601	11032521		Control module programmed
0601	12025831		Control module not programmed
0602	00418283		Support
0603	00489194		Transformer
0604	10008933		Clip
0605	10010202		Clip
0610	10008207		Ignition cable
0611	12024415		Ignition cable
0612	12026846		Cable harness
0613	12028038		Control mechanism
0614	12024414		Cable harness
0615	12028039		Cable harness
0616	10010201		Adapter
0620	12026848		Cable harness
0621	12026928		Cable harness
0607	00423966		Cable strap

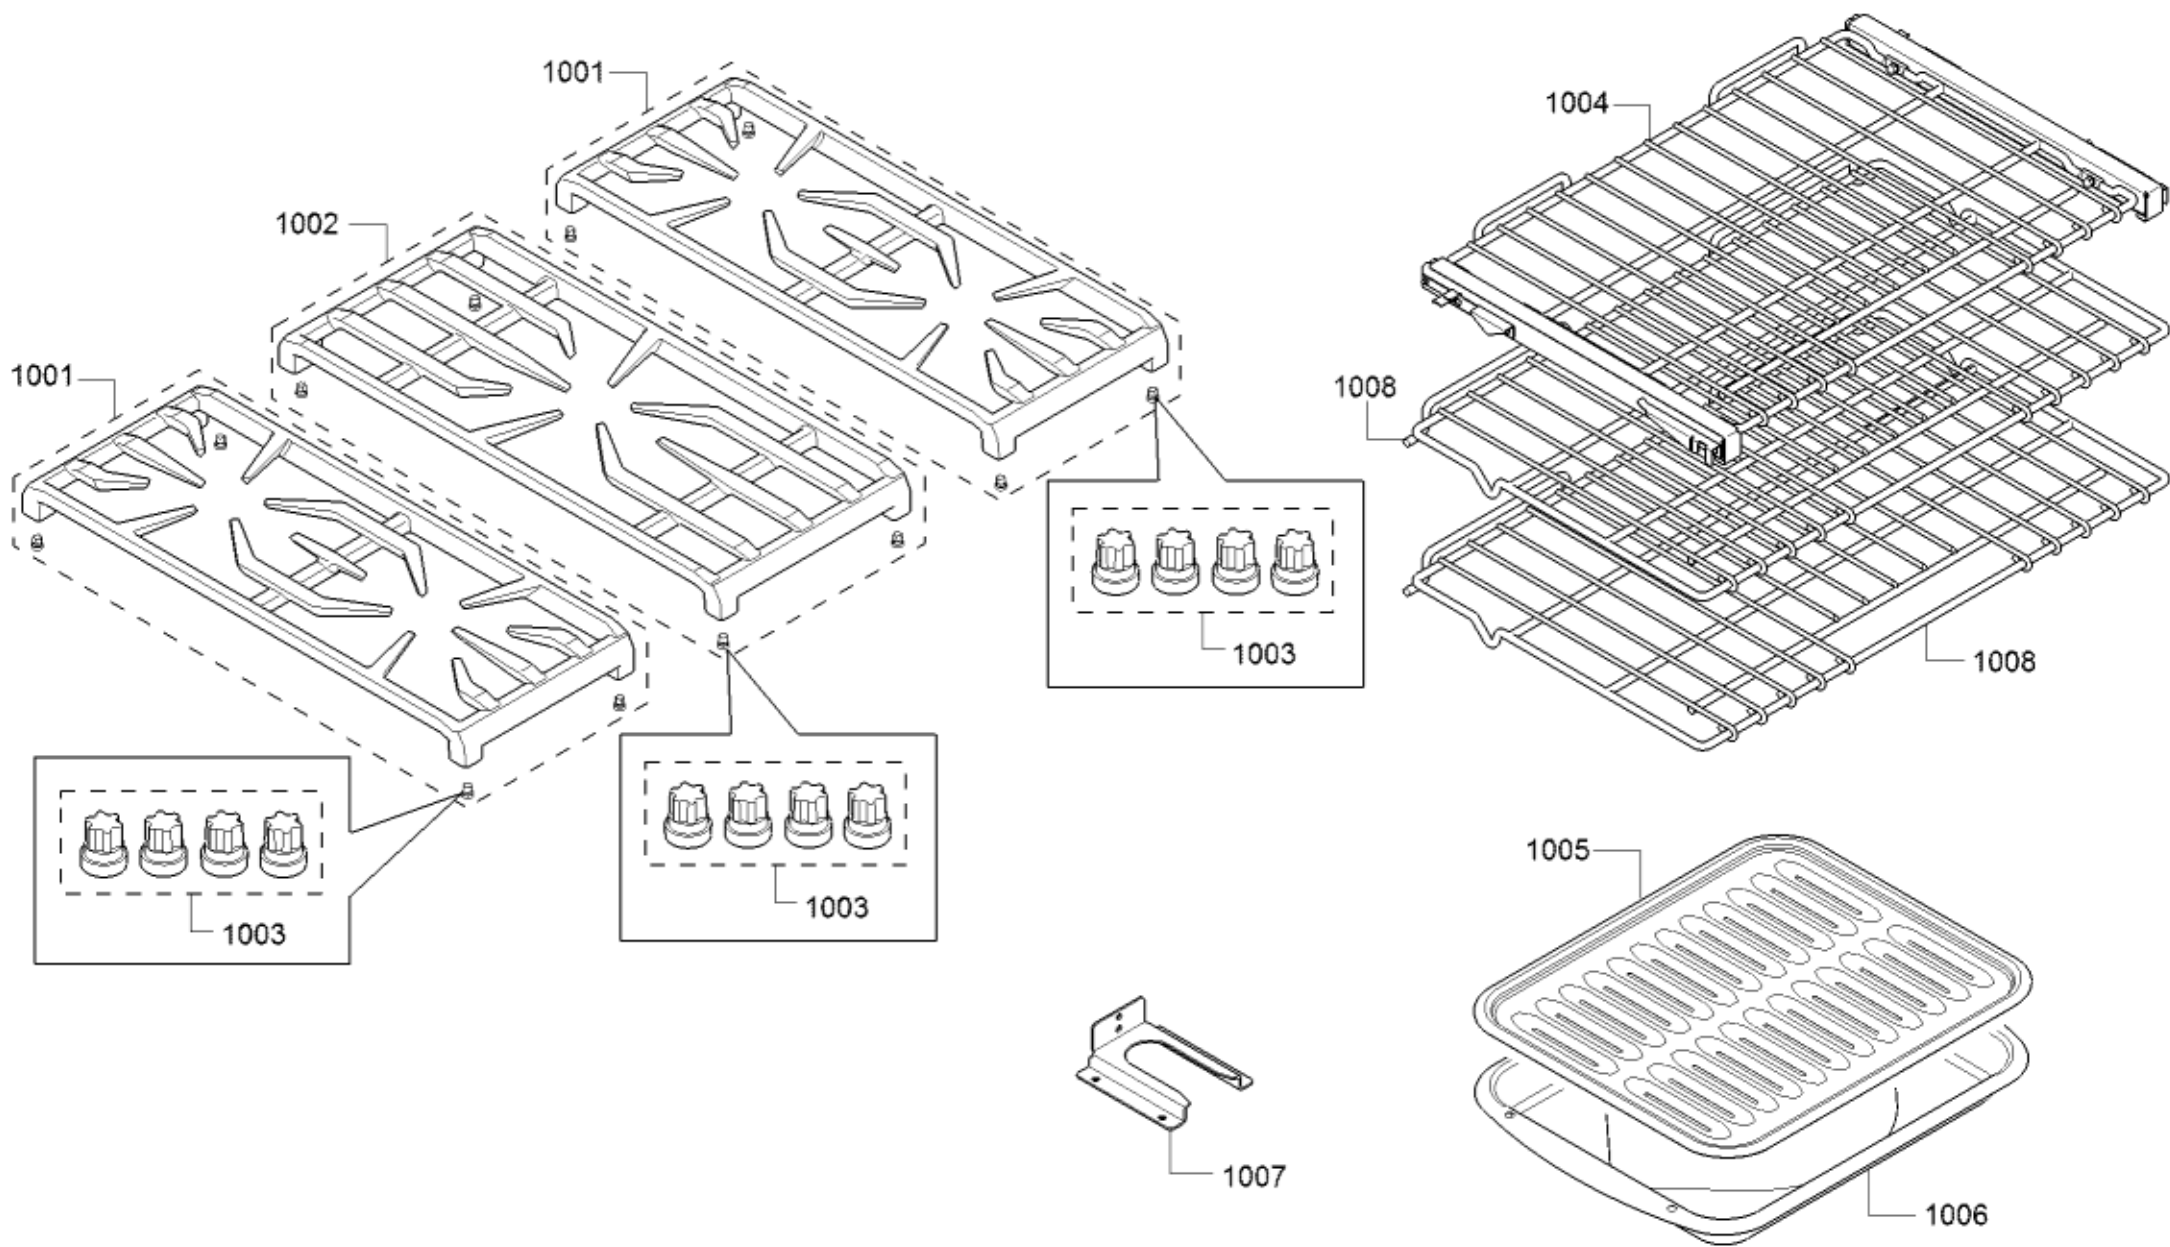 


<b>Position ID</b>	<b>Part number.</b>	<b>Replaces:</b>	<b>Description</b>
1004	00774613		30" Telescopic Rack
1005	11013689		Grill tray
1006	00484628	00449757	Tray for Broiler Pan
1008	00712470		Shelf
1001	00145748		Grill grid
1002	00145747		Grill grid
1003	00637940		Grate Foot Replacement Kit
1007	10010207		Bracket




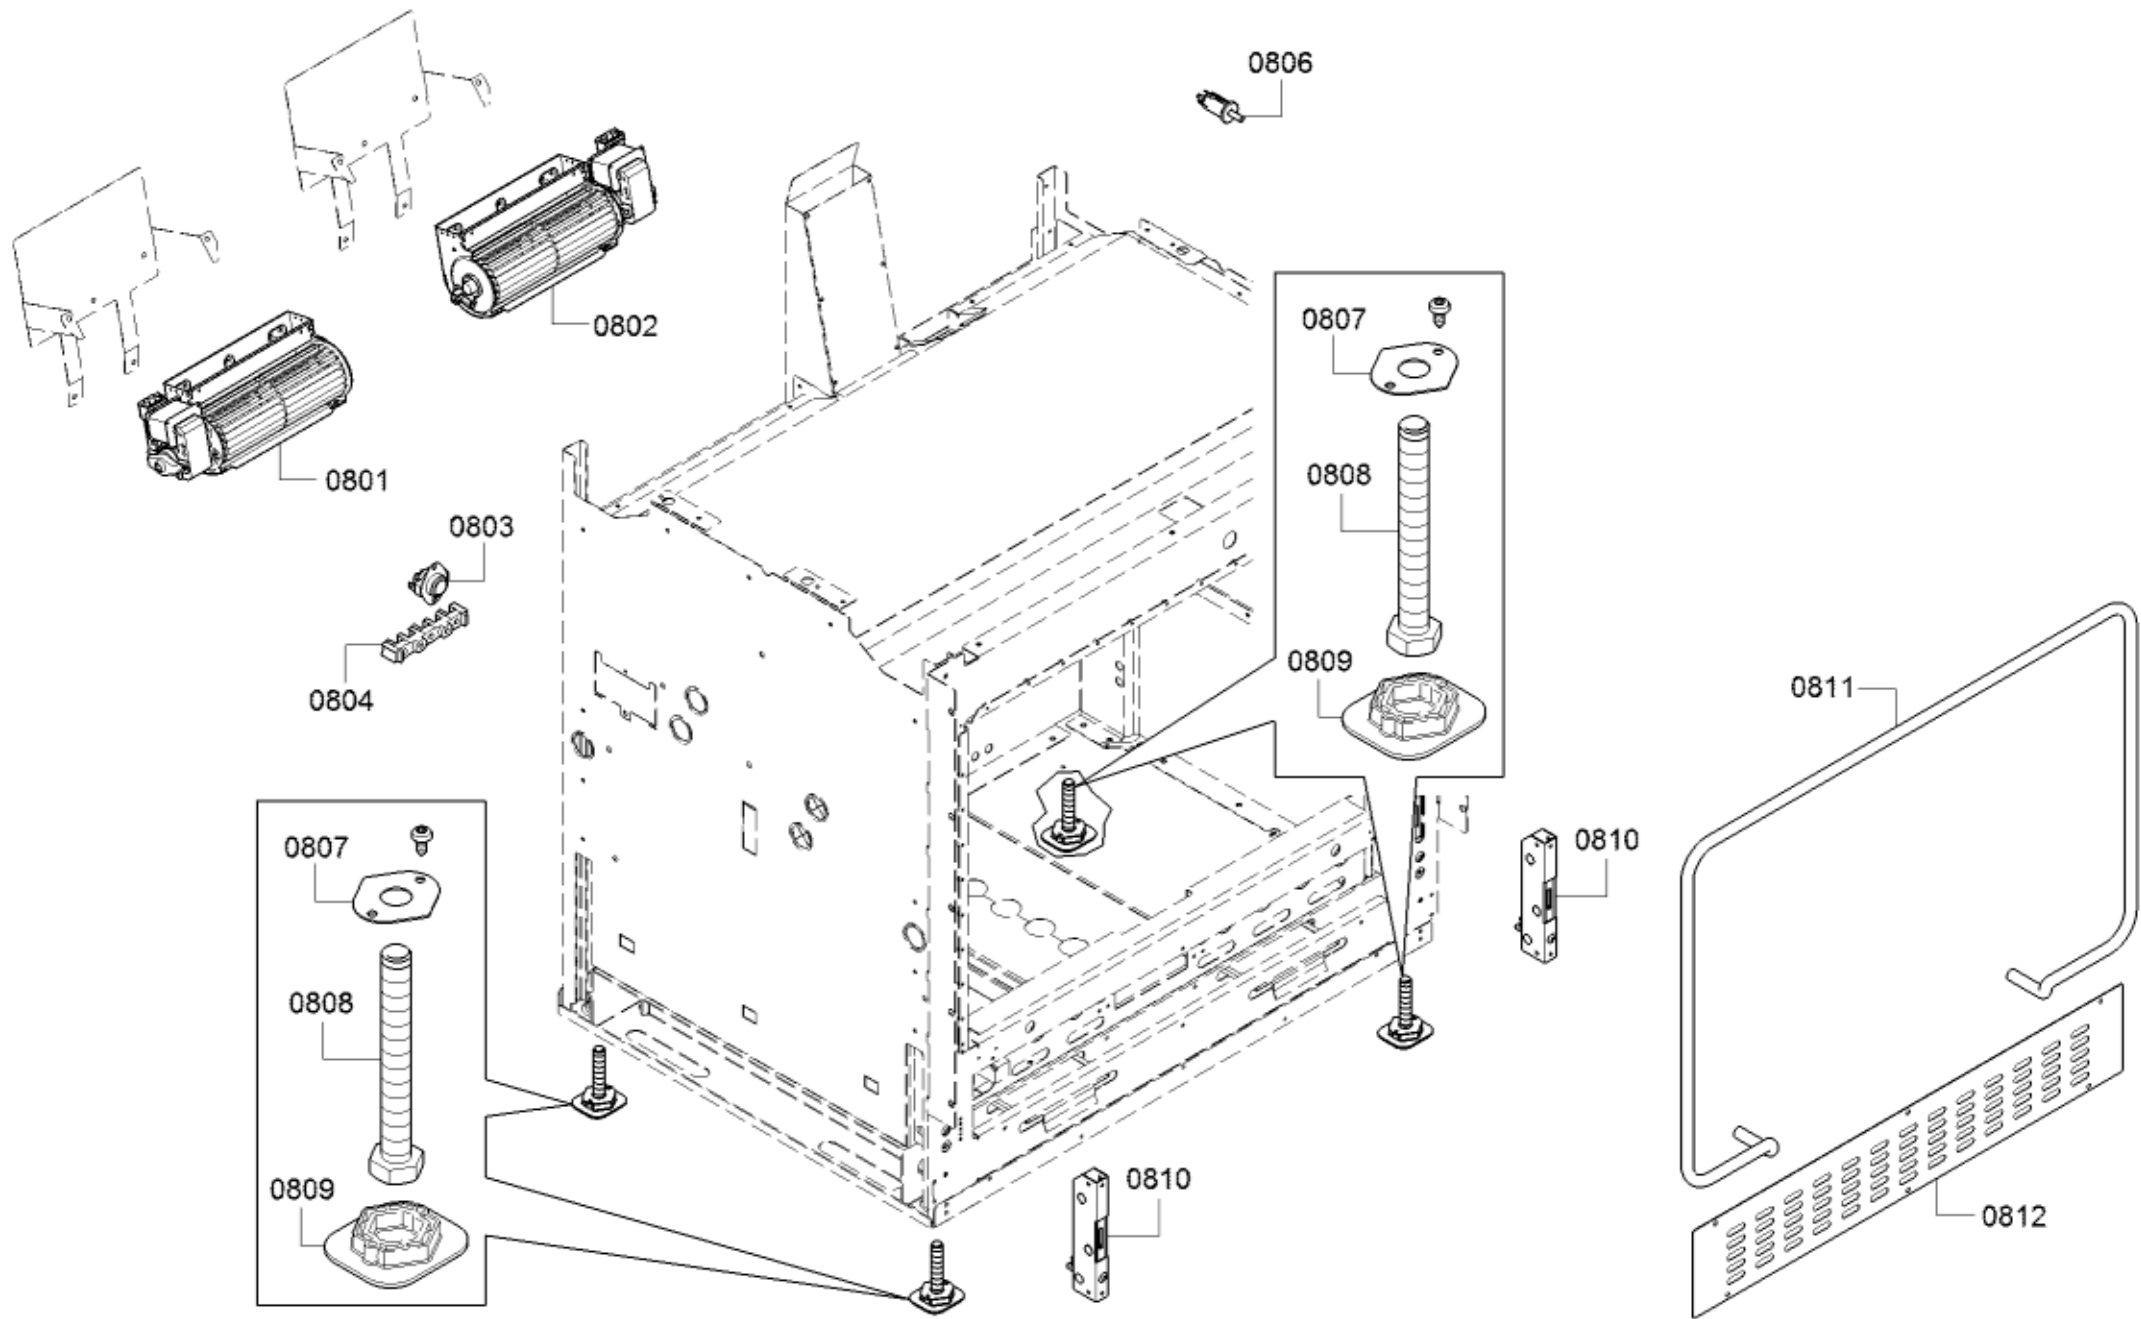 


<b>Position ID</b>	<b>Part number.</b>	<b>Replaces:</b>	<b>Description</b>
0802	00643600		Cooling Fan
0803	10011167		Limiter-temperature
0804	00628372		Terminal
0806	00618400		Switch-door
0807	10001186		Plate
0808	10011170		Bolt
0809	10001351		Foot
0810	00649416		Hinge-plate
0811	12028040		Seal-door
0812	00146142		Cover sheet
0813	00656311	00752651	Power cord
0801	10020211		Fan motor

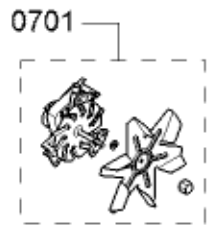 


0701

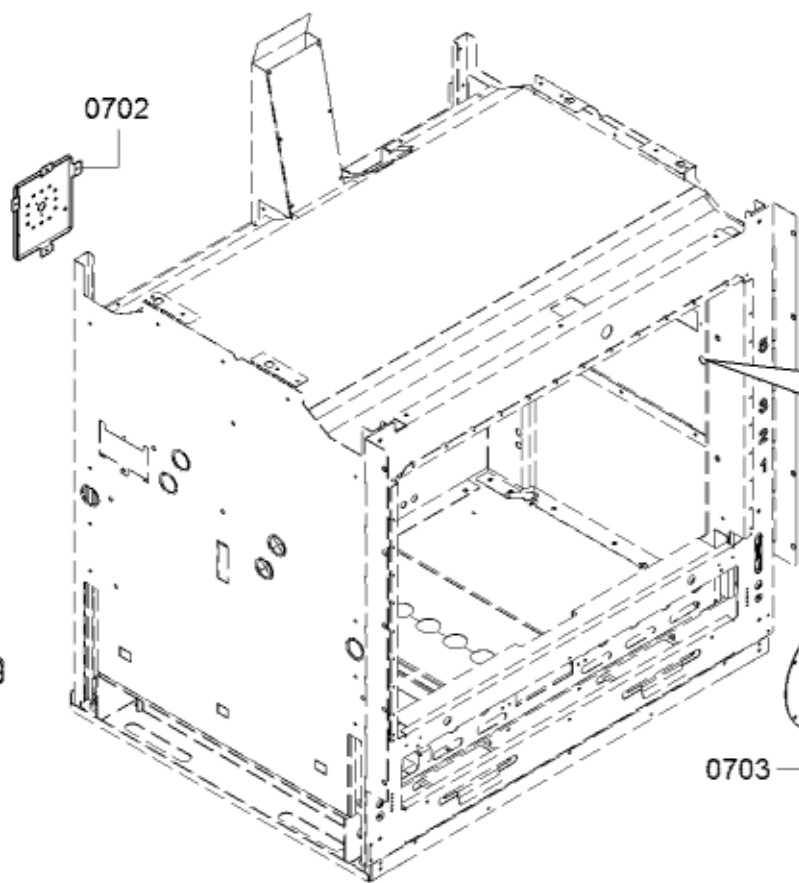 

0702

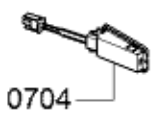 


0704

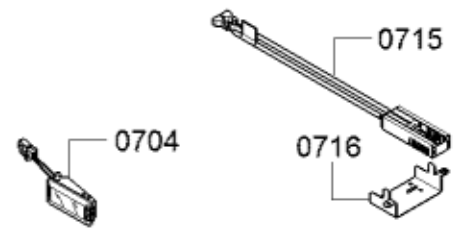 


0704

0715

 
0716

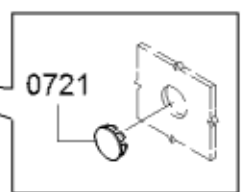

0721

 


0709

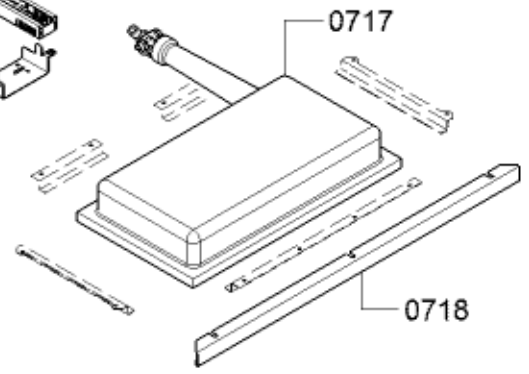 


0717

 0718

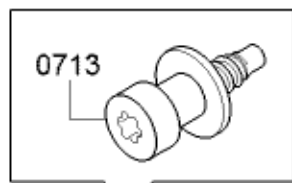


0713

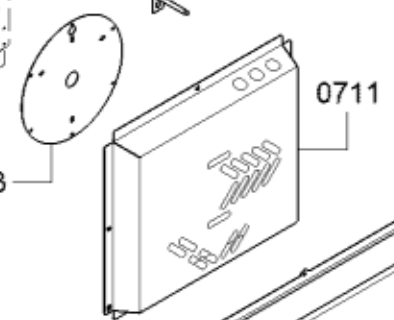 


0703

 0711

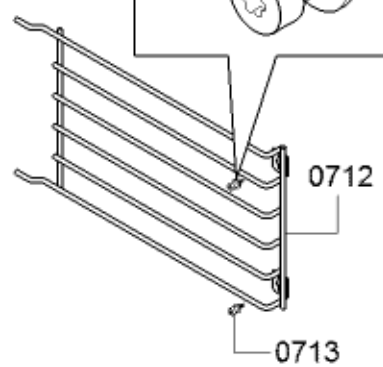

0712

 
0713

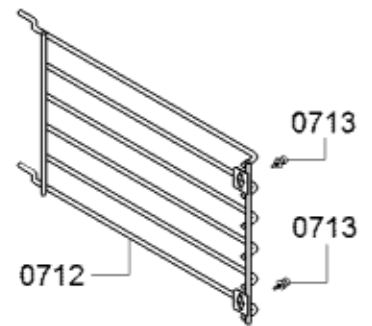

0712


0713

 0713

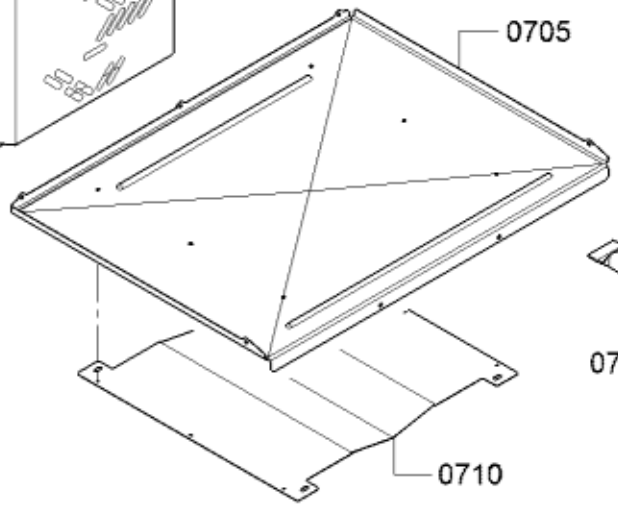

0705

 0710

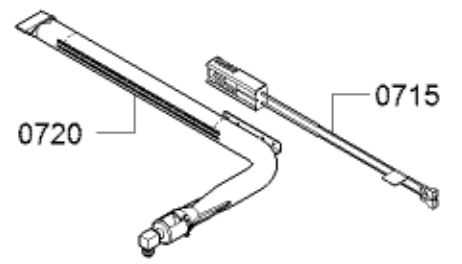

0720

0715



0796

<b>Position ID</b>	<b>Part number.</b>	<b>Replaces:</b>	<b>Description</b>
0701	00497756		Motor
0702	00489178		Bracket
0703	00479238		Cover
0704	10007424		Lamp
0705	20000102		Lining
0709	00627375		Temperature sensor
0710	11030966		Plate
0711	11030909		Cover
0712	00146140		Support
0713	11032400		Tube
0716	00600909		Bracket
0717	11030965		Burner
0718	00445814		Guide
0720	11032345		Burner pipe
0721	10010304		Plug
0715	00492431		Igniter