

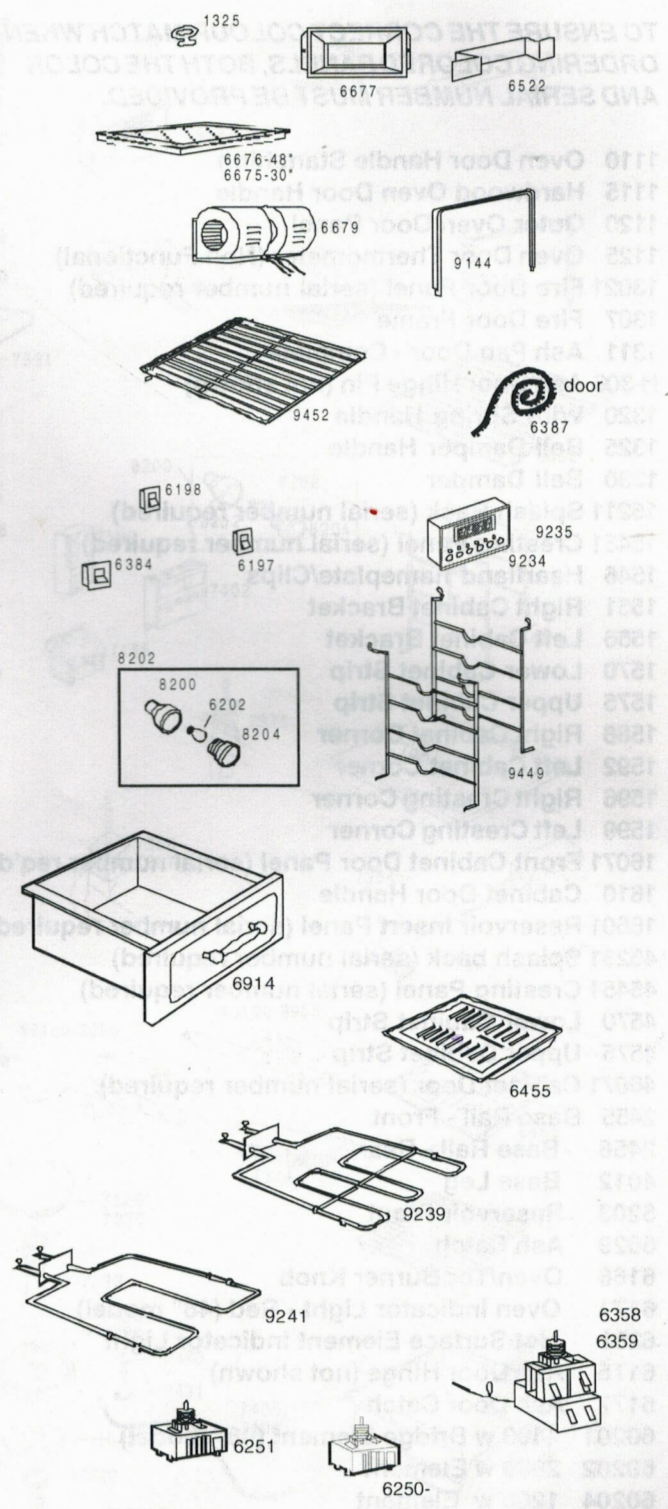


# Exploded View & Parts:

## Models 8125/8135; 6125/6135

Section 7-1

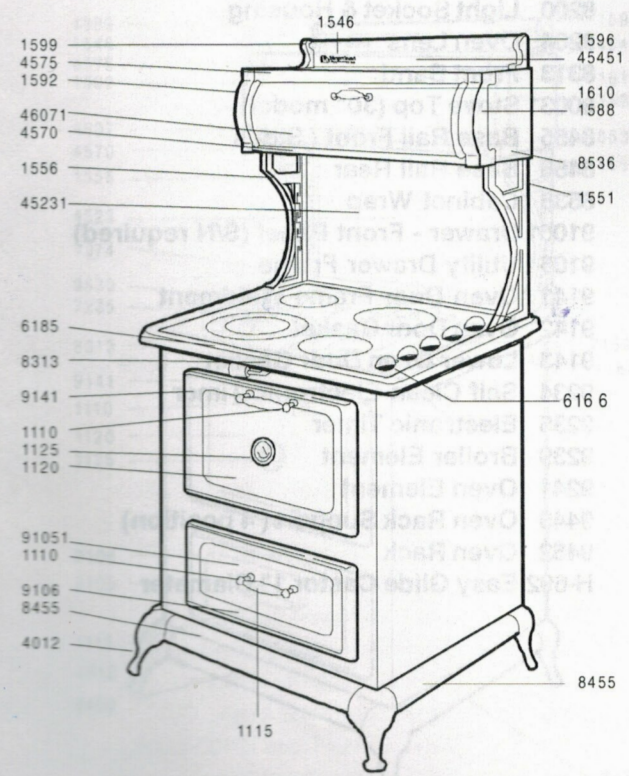

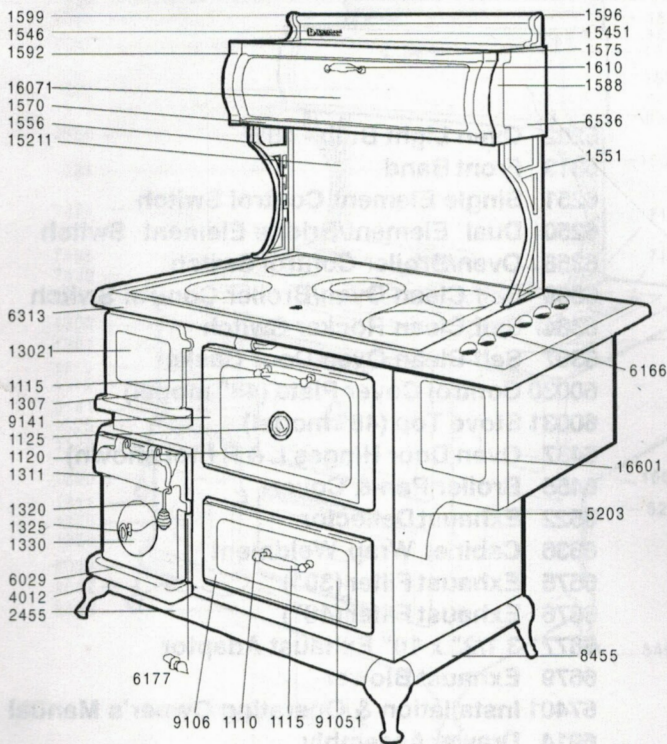

# **Exploded View & Parts:**

## **Models 8125/8135; 6125/6135**

Section 7-1

**TO ENSURE THE CORRECT COLOUR MATCH WHEN ORDERING COLORED PANELS, BOTH THE COLOR AND SERIAL NUMBER MUST BE PROVIDED.**

- 1110 Oven Door Handle Stanchion
- 1115 Hardwood Oven Door Handle
- 1120 Outer Oven Door Panel
- 1125 Oven Door Thermometer (Non Functional)
- 13021 Fire Door Panel (serial number required)
- 1307 Fire Door Frame
- 1311 Ash Pan Door - Complete
- H-306 Ash Door Hinge Pin (not shown)
- 1320 Wire Spring Handle
- 1325 Bell Damper Handle
- 1330 Bell Damper
- 15211 Splash Back (serial number required)
- 15451 Cresting Panel (serial number required)
- 1546 Heartland nameplate/Clips
- 1551 Right Cabinet Bracket
- 1556 Left Cabinet Bracket
- 1570 Lower Cabinet Strip
- 1575 Upper Cabinet Strip
- 1588 Right Cabinet Corner
- 1592 Left Cabinet Corner
- 1596 Right Cresting Corner
- 1599 Left Cresting Corner
- 16071 Front Cabinet Door Panel (serial number req'd)
- 1610 Cabinet Door Handle
- 16601 Reservoir Insert Panel (serial number required)
- 45231 Splash back (serial number required)
- 45451 Cresting Panel (serial number required)
- 4570 Lower Cabinet Strip
- 4575 Upper Cabinet Strip
- 46071 Cabinet Door (serial number required)
- 2455 Base Rail - Front
- 2456 Base Rail - Rear
- 4012 Base Leg
- 5203 Reservoir Front
- 6029 Ash Catch
- 6166 Oven/TopBurner Knob
- 6171 Oven Indicator Light - Red (48" model)
- 6231 Hot Surface Element Indicator Light
- 6176 Ash Door Hinge (not shown)
- 6177 Ash Door Catch
- 60201 4400 w Bridge Element (48" model)
- 60202 2000 w Element
- 60204 1200 w Element
- 60205 2500/1000 w Dual Element
- 60203 1500 w Element (30" model)
- 6197 2 Speed Blower Control Switch
- 6198 Range Light Switch
- 6202 Oven Light Bulb - 40W
- 6313 Front Band
- 6251 Single Element Control Switch
- 6250 Dual Element/Bridge Element Switch
- 6358 Oven/Broiler Control Switch
- 6359 Self Clean Oven/Broiler Control Switch
- 6384 Self Clean Rocker Switch
- 6387 Self Clean Oven Door Gasket
- 60030 Control Cover Plate (48" model)
- 60031 Stove Top (48" model)
- 6437 Oven Door Hinges L & R (not shown)
- 6455 Broiler Pan & Cover
- 6522 Exhaust Deflector
- 6536 Cabinet Wrap Weldment
- 6675 Exhaust Filter (30")
- 6676 Exhaust Filter (48")
- 6677 3 1/2" x 10" Exhaust Adaptor
- 6679 Exhaust Blower
- 67401 Installation & Operating Owner's Manual
- 6914 Drawer Assembly
- 8200 Light Socket & Housing
- 8204 Oven Lens
- 8313 Front Band
- 80031 Stove Top (30" model)
- 8455 Base Rail Front / Sides
- 8456 Base Rail Rear
- 8536 Cabinet Wrap
- 91051 Drawer - Front Panel (S/N required)
- 9106 Utility Drawer Frame
- 9141 Oven Door Frame Weldment
- 9142 Oven Door Gasket
- 9143 Lower Oven Door Gasket
- 9234 Self Clean Electronic Timer
- 9235 Electronic Timer
- 9239 Broiler Element
- 9241 Oven Element
- 9449 Oven Rack Support ( 4 position)
- 9452 Oven Rack
- H-692 Easy Glide Castor 1" Diameter