


Exploded View & Parts: Models 9720/9730

Section 7-4

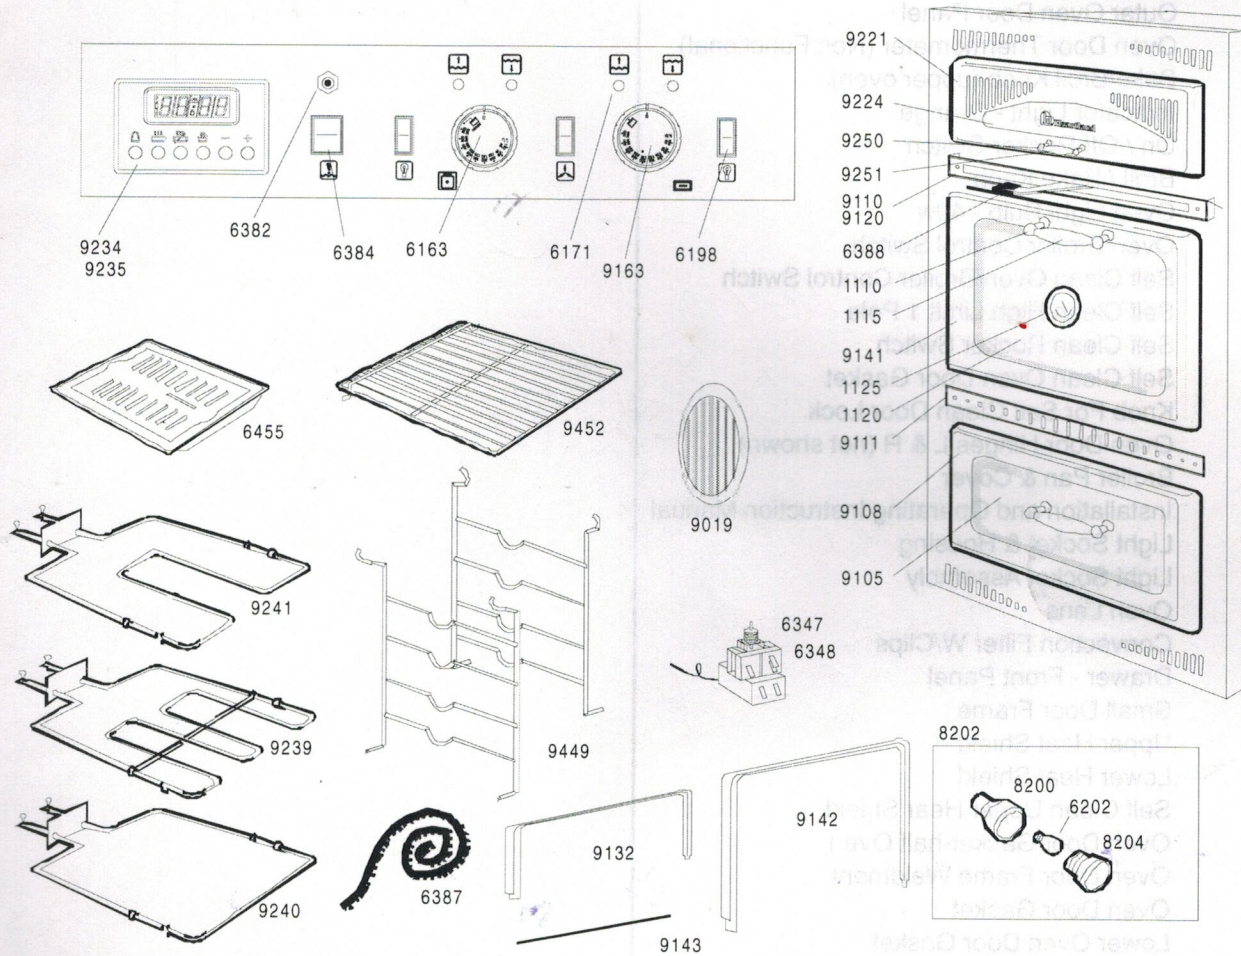

Exploded View & Parts:

Models 9720/9730

Section 7-4

- 1110 Oven Door Handle Stanchion
- 1115 Hardwood Oven Door Handle
- 1120 Outer Oven Door Panel
- 1125 Oven Door Thermometer (Non Functional)
- 6163 Bake/Broil Knob (upper oven)
- 6171 Indicator Light - Orange
- 6198 On / Off Rocker Switch
- 6163 Broil / Bake Knob
- 6202 Oven Light Bulb - 40w
- 6347 Oven/Broiler Control Switch
- 6348 Self Clean Oven/Broiler Control Switch
- 6382 Self Clean High Limit 1 Pole
- 6384 Self Clean Rocker Switch
- 6387 Self-Clean Oven Door Gasket
- 6388 Knob For Self Clean Door Lock
- 6437 Oven Door Hinges L & R (not shown)
- 6455 Broiler Pan & Cover
- 9716 Installation and Operating Instruction Manual
- 8200 Light Socket & Housing
- 8202 Light Socket Assembly
- 8204 Oven Lens
- 9019 Convection Filter W/Clips
- 9105 Drawer - Front Panel
- 9108 Small Door Frame
- 9110 Upper Heat Shield
- 9111 Lower Heat Shield
- 9120 Self Clean Upper Hear Shield
- 9132 Oven Door Gasket-half Oven
- 9141 Oven Door Frame Weldment
- 9142 Oven Door Gasket
- 9143 Lower Oven Door Gasket
- 9163 Bake/Broil Knob (lower oven)
- 9221 Control Door Weldment
- 9224 Control Cover Accent Panel
- 9234 Self Clean Electronic Timer
- 9235 Standard Electronic Timer
- 9239 Broiler Element (3000w)
- 9240 Buried Bake Element (1000w)
- 9241 Oven Element (2600w)
- 9250 Mini Stantion
- 9251 Mini Wood Handle
- 9449 Oven Rack Support (4 position)
- 9452 Oven Rack

