



MODEL 5000 COMBINATION RANGE PARTS CHART

Please identify parts orders with model and serial number of stove. (Located under warming drawer).

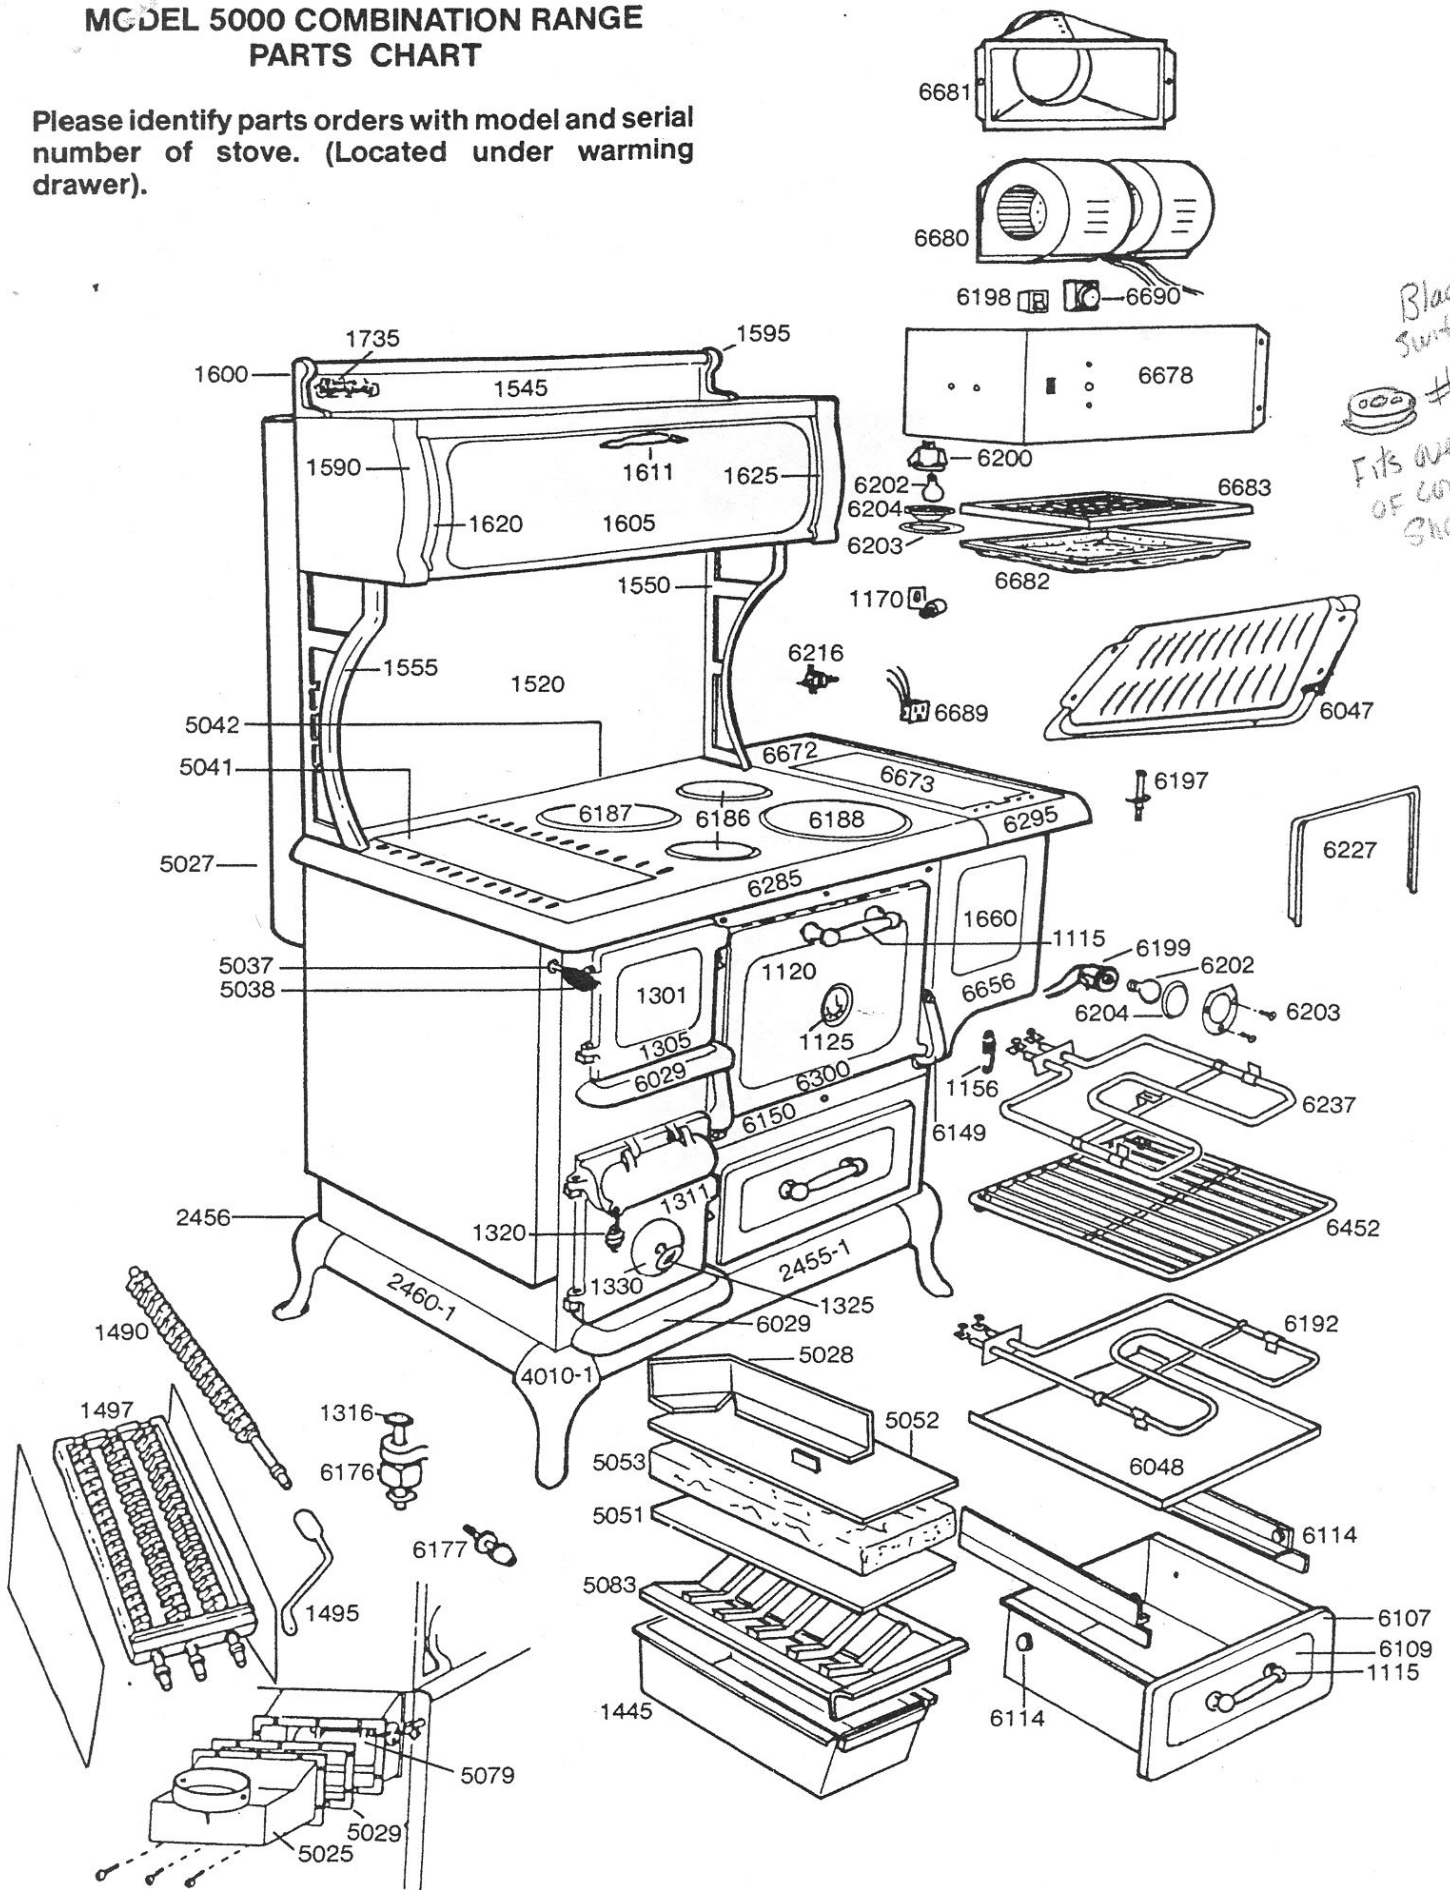

MODEL 5000 COMBINATION WOOD / COAL / ELECTRIC RANGE PARTS LIST

1115	Oven Door Handle (Wood)	6048	Oven Drip Tray
1120	Oven Door Panel — Outer	6107	Utility Drawer Frame
1125	Oven Door Thermometer (Non-Functional)	6109	Utility Drawer — Outer Panel
1156	Oven Door Spring — Right and Left	6114	Roller For Oven Drawer
1170	Cabinet Spring Catch	6149	Right Oven Door Hinge
1301	Fire Door Panel	6150	Left Oven Door Hinge
1305	Fire Door Frame	14295	Gasket For Fire and Ash Door
1311	Ash Pan Door — Complete	6152	Switch Knob for Surface Element (not shown)
1316	Ash Door Hinge — Pins	6153	Switch Knob for Oven Control (not shown)
1320	Wire Spring Handle	6154	Switch Seal — Foam (not shown)
1325	Cast Bell Damper Handle	6176	Hinge — Fire and Ash Door
1330	Bell Damper	6177	Striker — Fire and Ash Door
1335	Spring Bell Damper	6186	Solid Element — Small
1445	Ash Pan	6187	Solid Element — Medium
1497	Coal Grate Assembly (Optional)	6188	Solid Element — Large
1520	Splash Back	6189	Element Switch (For Small Element) 2 required (not shown)
1545	Cresting Panel	6190	Element Switch (For Medium Element) (not shown)
1550	Right Cabinet Bracket	6191	Element Switch (For Large Element) (not shown)
1555	Left Cabinet Bracket	6192	Oven Element
1585	Right Cabinet Cast Corner	6194	Oven Control (18" Cap) (not shown)
1590	Left Cabinet Cast Corner	6197	Red Indicator Light
1595	Right Cast Cresting Corner	6198	Oven and Cabinet Light Switch
1600	Left Cast Cresting Corner	6199	Oven Light Socket with Leads
1605	Front Cabinet Door Panel	6200	Closet Light Socket with Tabs
1611	Cabinet Door Handle	6202	Oven Light Bulb — 40W
1620	Left Cabinet Hinge	6203	Oven Light Lens Frame
1625	Right Cabinet Hinge	6204	Oven Light Lens
1660	Reservoir Insert Panel	6214	Circuit Breaker — 15A (not shown)
1735	Logo With Clips	6215	Circuit Breaker — 20A (not shown)
2455	Front of Base	6216	Thermo Disc — Oven Safety
2456	Rear of Base	6227	Oven Door Gasket with Clips
2460	Right and Left of Base	6236	Circuit Breaker — 30 AMP (not shown)
4010	Base Legs	6237	Element — Broiler
5025	Smoke Pipe Boot	6238	Control for Oven - Broiler
5029	Gasket — Boot	6285	Curved Band — Cooking Surface
5027	Heatshield Kit	6295	Curved Band — Reservoir
5028	Smoke Deflector — Top	6300	Frame Assembly Oven Door
5037	Control Rod — Bypass Damper	6452	Oven Rack
5038	Wood Handle — Bypass Damper	6656	Reservoir Front
5041	Hot Plate	6672	Reservoir Top Frame
5042	Stove Top	6673	Reservoir Lid
5051	Baffle Plate Bottom	6678	Blower Wrapper
5052	Baffle Plate Top	6680	Exhaust Blower
5053	Insulation — Baffle	6681	Exhaust Adapter Boot to 4" Round
5079	Damper Plate — Bypass	6682	Mesh Filter
5083	Wood Grate Assembly	6683	Charcoal Filter
5088	Air Restrictor Plate	6689	Blower Receptacle — 3 Wire
6029	Ash Catch	6690	Blower Speed Control with Knob and Nut
6047	Broiler Pan (Large)		

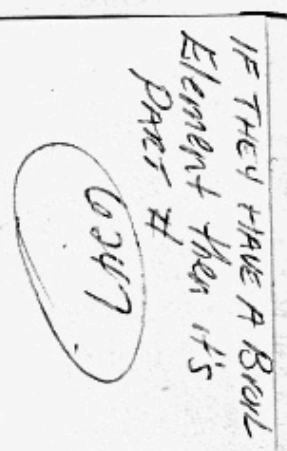

 IF THEY HAVE A BOWL
 Element then it's
 PART #
 6047