

ILVE RANGES - ERROR CODES

ERROR CODE	DESCRIPTION	WHAT TO DO:
E00-1	Cavity probe in open circuit (in multifunction main cavity)	REPLACE PT1000 PROBE CODE EA6551005000000
E00-2	Cavity probe in open circuit (in static second cavity)	REPLACE NTC PROBE CODE EA6551001000000
E00-2	Cavity probe in open circuit (in multifunction second cavity, UM15, UM60)	REPLACE PT1000 PROBE CODE EA6551005000000
E01-1	Cavity probe in short circuit (in multifunction main cavity)	REPLACE PT1000 PROBE CODE EA6551005000000
E01-2	Cavity probe in short circuit (in static second cavity)	REPLACE NTC PROBE CODE EA6551001000000
E01-2	Cavity probe in short circuit (in multifunction second cavity, UM15, UM60)	REPLACE PT1000 PROBE CODE EA6551005000000
E04-1	Meat probe in open circuit (in multifunction main cavity)	REPLACE MEAT PROBE CODE EA6551002000000
E05-1	Meat probe in short circuit (in multifunction main cavity)	REPLACE MEAT PROBE CODE EA6551002000000
E08-1	Display TFT over heating	CHECK IF THE COOLING FAN WORKS
E19-1	Incorrect electronic power board	RECONFIGURE TFT DISPLAY
E19-2	Incorrect electronic power board	RECONFIGURE TFT DISPLAY
E20-1	Communication error	CHECK CONNECTIONS BETWEEN TFT DISPLAY AND ELECTRONIC POWER BOARD
E20-2	Communication error	CHECK CONNECTIONS BETWEEN ELECTRONIC POWER BOARDS

