


**KitchenAid®**

**36" 6 BURNER COMMERCIAL-STYLE GAS COOKTOP**

**MODELS:**

KCGC506JSS00 (Stainless)


# BURNER BOX PARTS

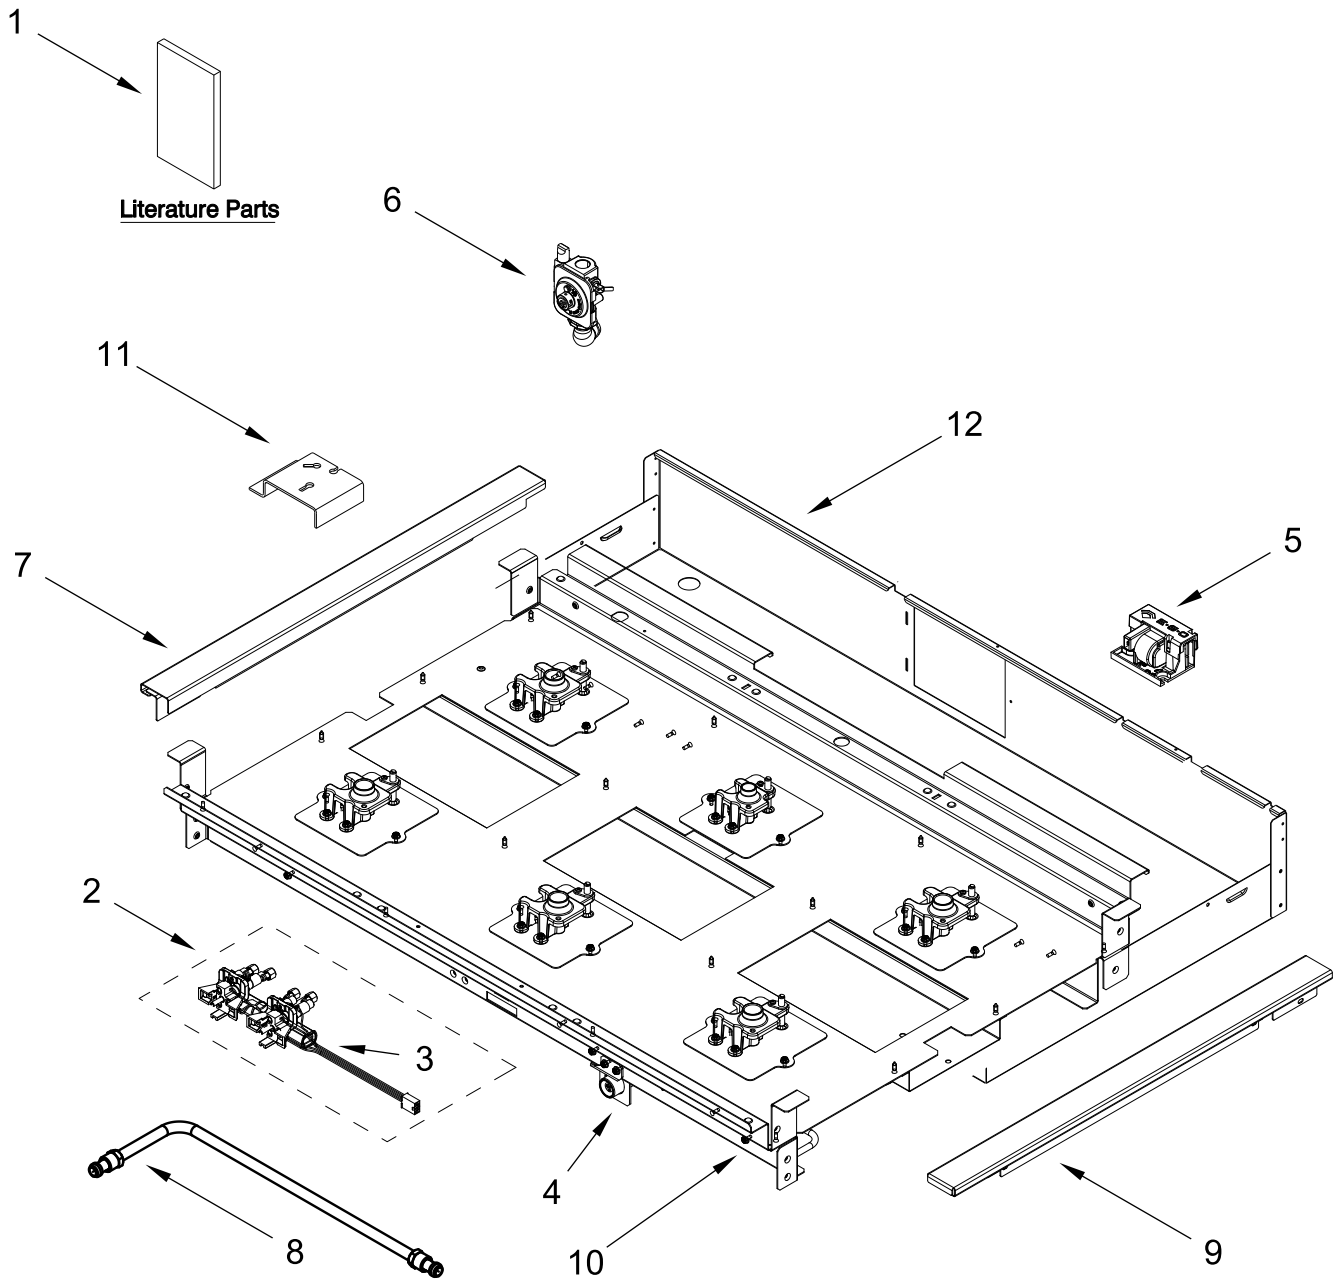

# BURNER BOX PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	5	W11121317	Module, Spark	12		Box, Burner (Not Serviced)
	W11179810	Guide, Use & Care	6	W10449140	Regulator, Pressure			
	W11179813	Instructions, Installation	7	W11047750	Main Trim, Left			FOLLOWING PARTS NOT ILLUSTRATED
	W11202393	Diagram, Wiring	8	W10892347	Tube, Manifold Supply (Left)		W11213527	Harness, Cooktop
	W11202295	Sheet, Tech		W10892445	Tube, Manifold Supply (Center)		W11038934	Harness, Jumper
2	W11183720	Assembly, Valve Manifold (Left Front and Left Rear)		W10892450	Tube, Manifold Supply (Right)		W10624584	Cord, Power
	W11036612	Assembly, Valve Manifold (Center Front and Center Rear)	9	W11047752	Main Trim, Right		W11238042	Kit, LP Conversion
	W10892994	Assembly, Valve Manifold (Right Front and Right Rear)	10		Assembly, Burner Box (Not Serviced)			
3	W10903728	Switch, Harness	11	8285790	Bracket, Mounting Orifice			
4	W11121199	Bracket, Manifold						

# COOKTOP AND BURNER PARTS

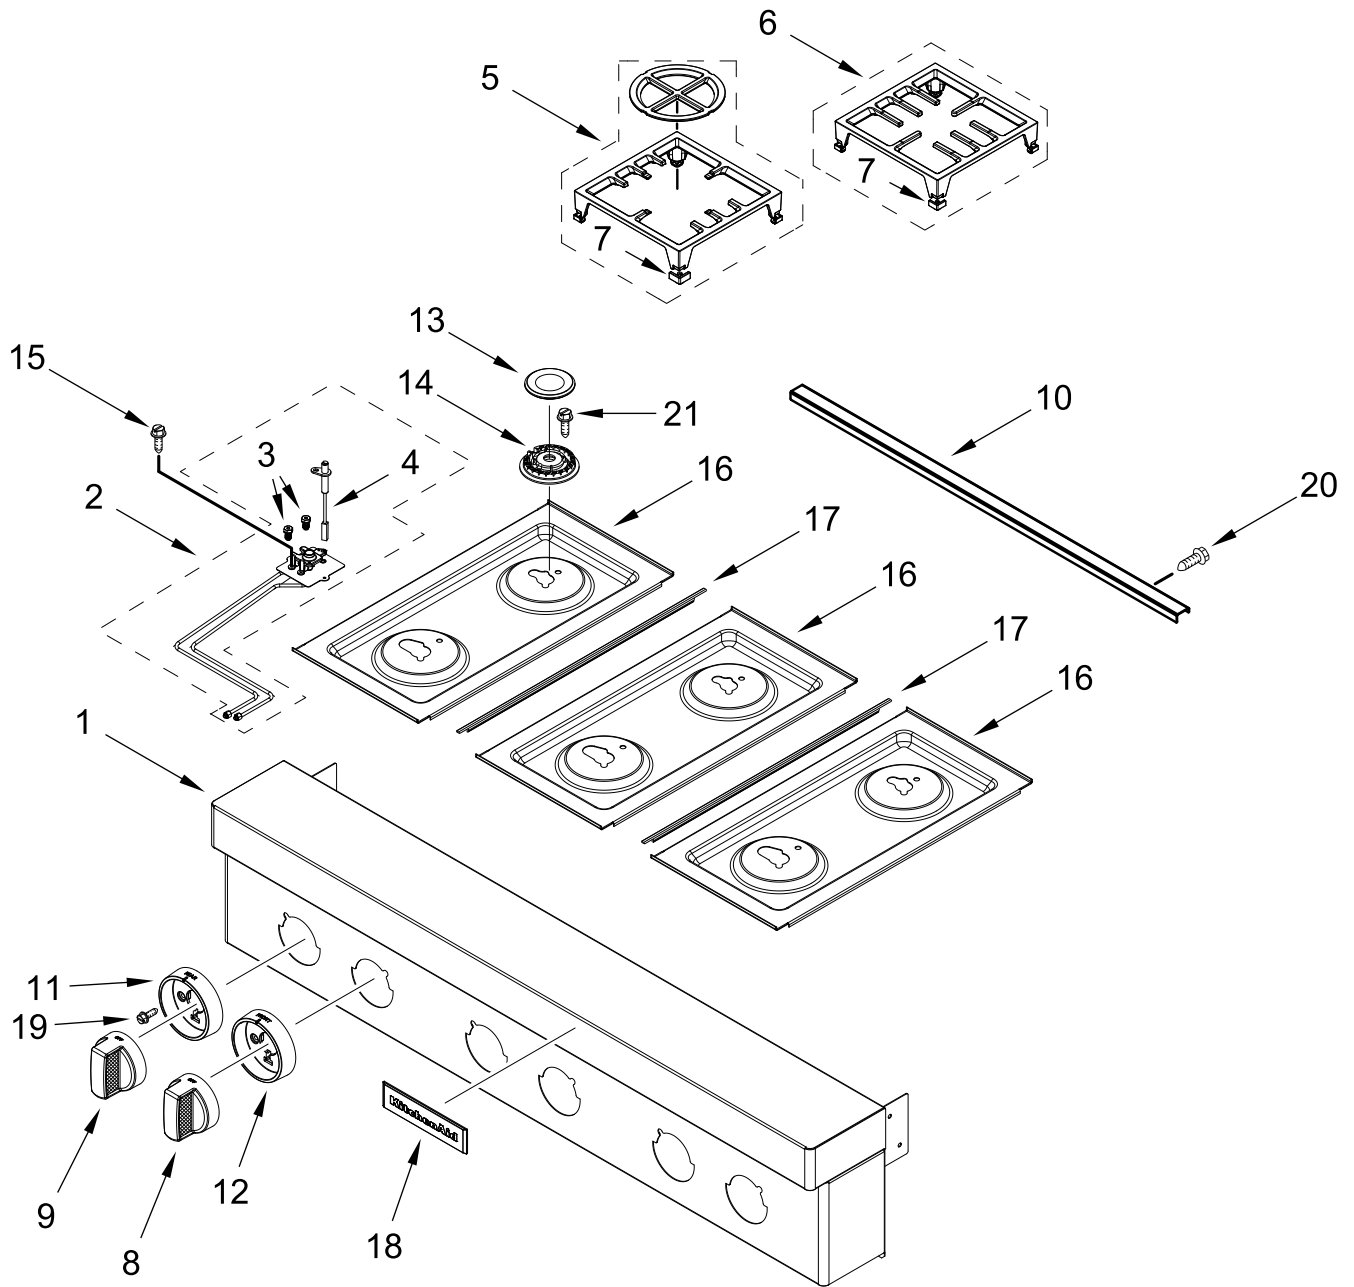

# COOKTOP AND BURNER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10878402	Panel, Console	5	W11291183	Burner, Grate (With Wok Ring)	17		Trim, T-Strip
2	W10892771	Assembly, Orifice Holder (Left Front, Right Front)	6	W11291179	Burner, Grate		W10271524	Black
	W10892484	Assembly, Orifice Holder (Left Rear and Right Rear)	7	W11042504	Bumper, Grate	18	W10518672	Badge
	W11159468	Assembly, Orifice Holder (Center Front)	8		Knob, Dual	19	W10919387	Screw
	W10892767	Assembly, Orifice Holder (Center Rear)		W10883172	Stainless	20	7101P338-60	Screw
3	W10892422	Orifice, Main (17.4K) (Left Front, Right Front)	9		Knob, Single	21	W11323261	Screw (8-18 X 1") (Left Front, Right Front)
	W10892419	Orifice, Main (15K) (Left Rear, Center Front, Right Rear)	10	W10912166	Stainless		W11323309	Screw (8-18 X 1/2") (Left Rear, Center Front, Center Rear, Right Rear)
	W10892435	Orifice, Simmer (2.6K) (Left Front, Right Front)	11	W11355760	Trim, Island			
	W10892438	Orifice, Simmer (5K) (Center Rear)	12	W10883433	Bezel (Rear Burners)			
4	W11238758	Igniter (Left Front, Right Front)	13	W10881642	Bezel (Front Burners)			
	W10892340	Igniter (Left Rear, Center Front, Center Rear, Right Rear)			Cap, Burner			
				W11121390	Black (Includes 6)			
			14	W10891746	Spreader, Flame (High) (Left Front, Right Front)			
				W10891974	Spreader, Flame (Low) (Left Rear, Center Front, Right Rear)			
				W10891978	Spreader, Flame (AUX) (Center Rear)			
			15	7101P426-60	Screw			
			16		Panel, Cooktop			
				W11038235	Black (Left)			
				W11038257	Black (Center)			
				W11038248	Black (Right)			

# OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORY PARTS
	4396920	Stainless Steel Cleaner & Polish
	W10160195	Cover, Grill/Griddle
	W10216179	Ring, Wok Backsplash
	W10285449	48" With Shelves
	31464	Cleaner, Cooktop
	W10123240	Rack, Broiler Pan & Roasting
	8284755	Backsplash (Adjustable)
	JXA9001CDP	Stainless Steel Wallsplash
	W11238043	Kit, High Altitude