


KitchenAid®

30" GAS BUILT-IN DOWNDRAFT COOKTOP

MODELS:

KCGD500GSS00 (Stainless)


COOKTOP PARTS

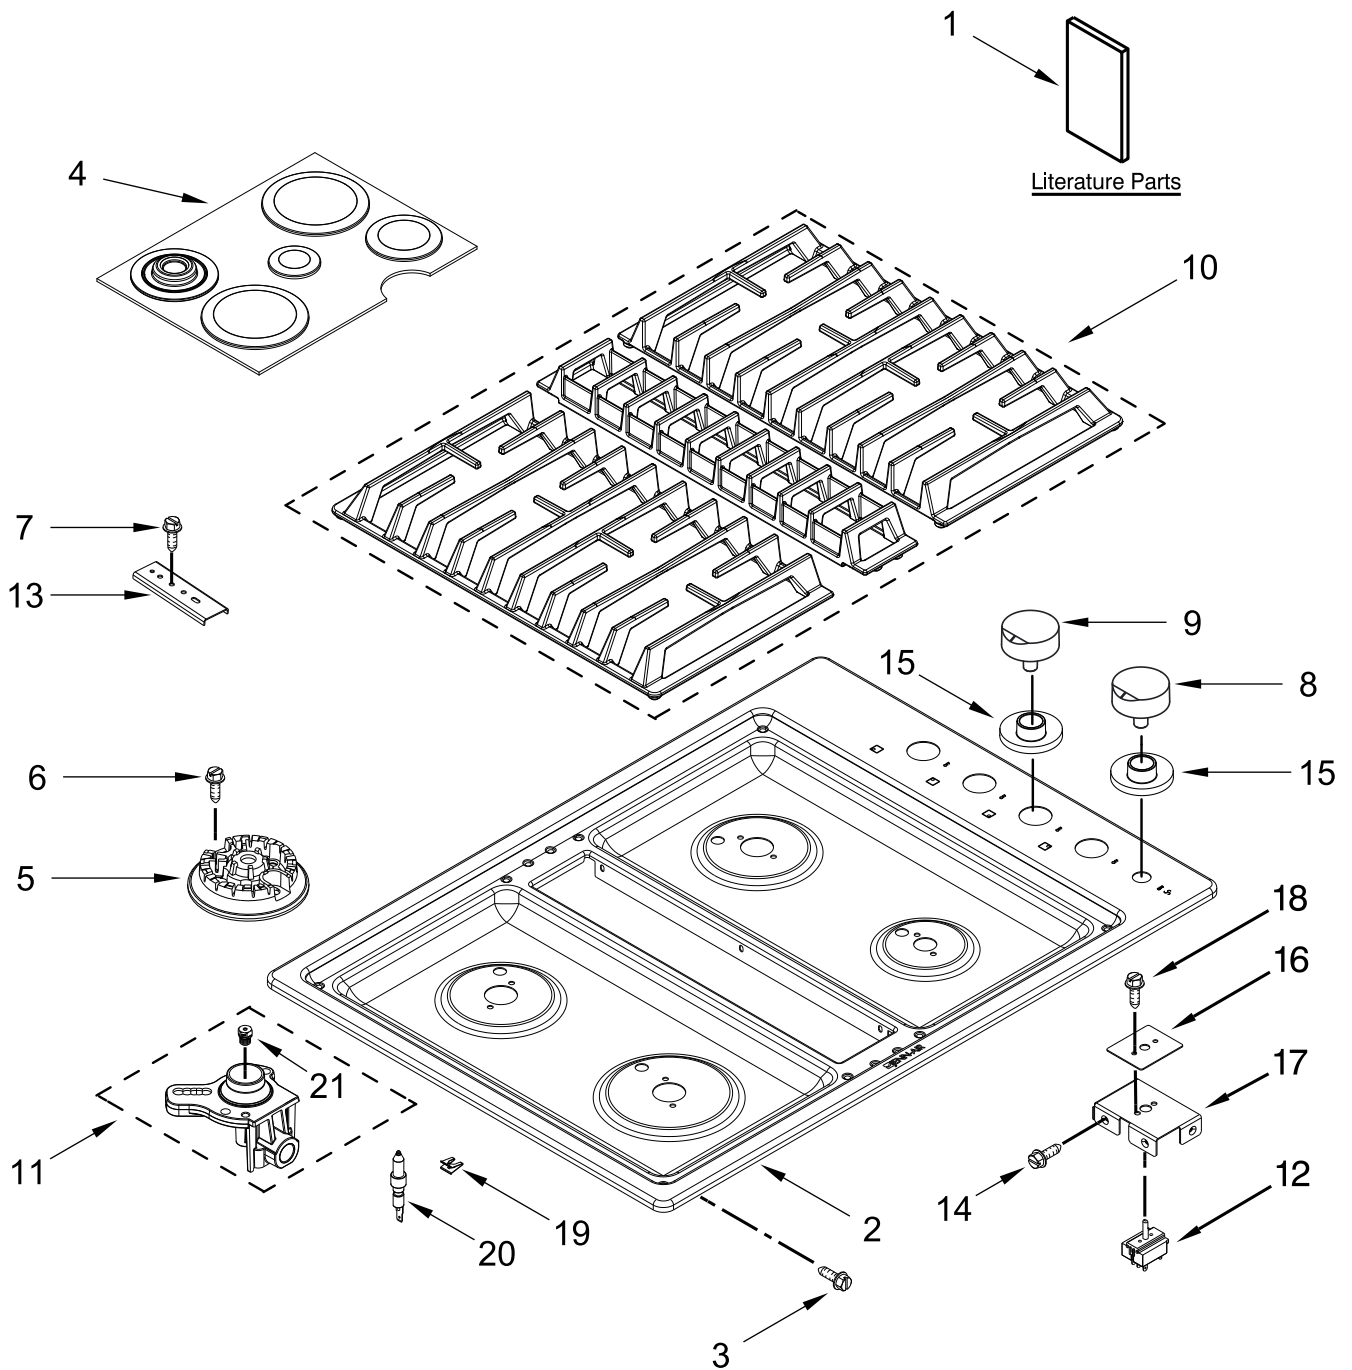

COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	9		Knob, Control	20	W10862325	Electrode (Left Front)
	W10848423	Guide, Use & Care		W10884723	Stainless		W10862326	Electrode (Left Rear)
	W10848427	Instructions, Installation	10	W10821819	Black		W10862323	Electrode (Right Front)
	W10917791	Diagram, Wiring	11	W10826752	Holder, Orifice (17K)		W10862324	Electrode (Right Rear)
	W10240007	Instructions, LP Conversion		W10826751	Holder, Orifice (5k)	21	W10907865	Orifice (Left Front)
	9762761	Tips, Safe Cooking (English)		W10826754	Holder, Orifice (10K)		W10849719	Orifice (Left Rear)
	W10065852	Tips, Safe Cooking (French)		W10826753	Holder, Orifice (15K)		W10907868	Orifice (Right Front)
2		Top, Main	12	W10866564	Switch, Blower		W10907866	Orifice (Right Rear)
	W10842288	Stainless	13	4455917	Bracket, Cooktop Mounting			FOLLOWING PARTS NOT ILLUSTRATED
3	7101P427-60	Screw	14	7101P427-60	Screw		W10834700	Harness, Main
4	W10910373	Kit, Burner Cap	15		Bezel		W10835283	Harness, Blower
5	W10732971	Spreader, Flame (Left Front & Right Rear)		W10884725	Stainless		W10858227	Harness, Jumper
	W10732968	Spreader, Flame (Left Rear)	16	7201P077-60	Gasket, Infinite Switch		W10831977	Cord, Power
	W10732969	Spreader, Flame (Right Front)	17	W10868745	Bracket, Switch Mount		W10132200	Relief, Strain
6	7101P426-60	Screw	18	7101P309-60	Screw		W10183556	Clip, Wire
7	3400093	Screw	19	W10827923	Clip, Spring (Electrode)		W10909126	Kit, Plenum Screw
8		Knob, Fan					W11022461	Kit, LP Orifice
	W10884724	Stainless						


BLOWER UNIT PARTS

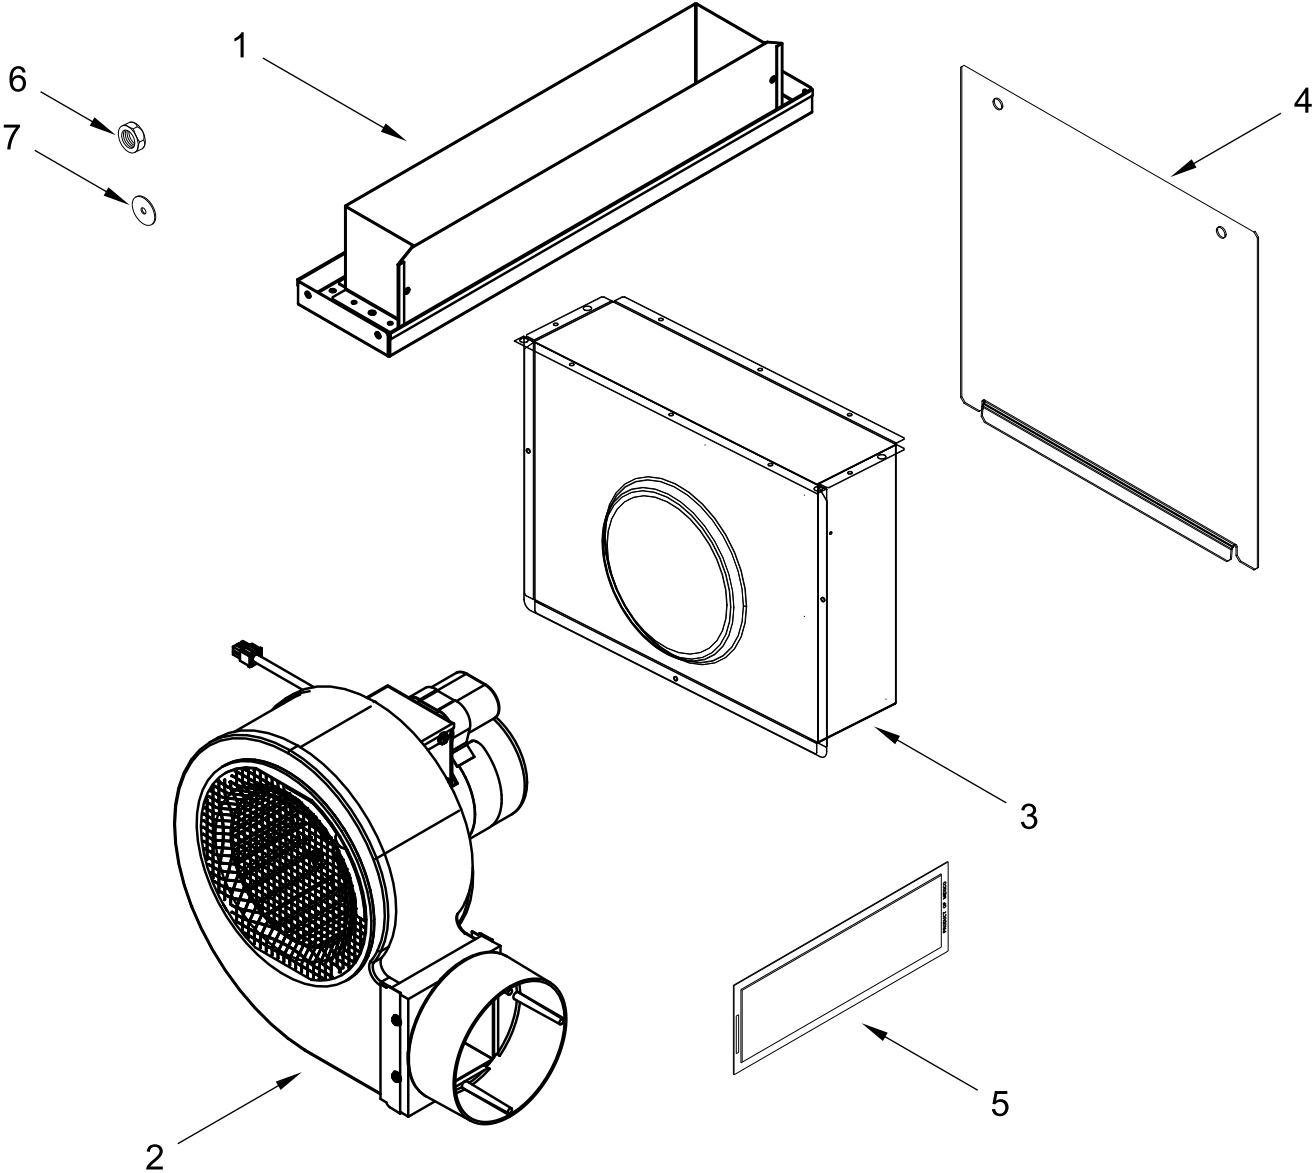

BLOWER UNIT PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10836514	Assembly, Top Plenum	4	W10837737	Panel, Lower Plenum Access	6	7103P162-60	Nut, Lock
2	W10877782	Assembly, Downdraft Blower	5	W10815866	Filter, Grease	7	7109P086-60	Washer
3	W10837738	Assembly, Lower Plenum						

BURNER BOX PARTS

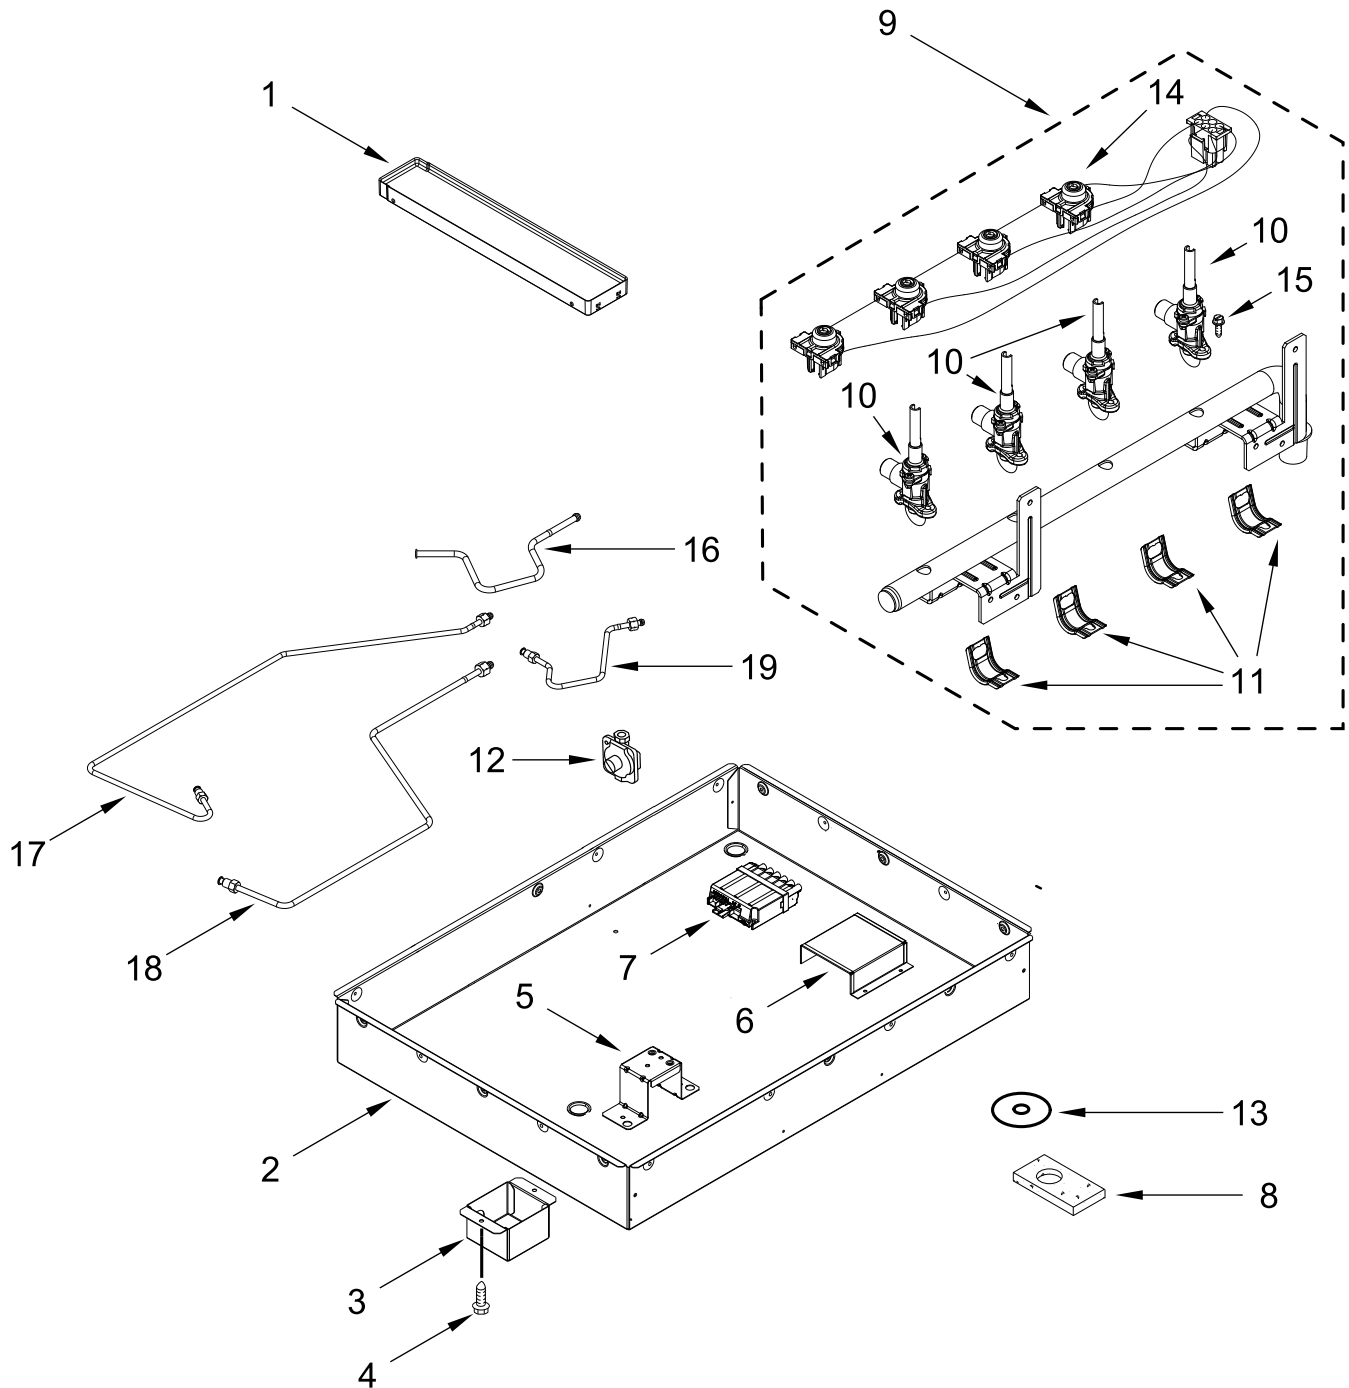

BURNER BOX PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10235990	Tray, Spill	10	W10844343	Valve (Left Front)	15	W10295997	Screw, Valve
2		Box, Burner (Not Serviced)		W10907216	Valve (Left Rear)	16	W10826747	Assembly, Tube (Left Front)
3	W10258697	Cover, Blower Motor Harness		W10844342	Valve (Right Front & Right Rear)	17	W10826748	Assembly, Tube (Left Rear)
4	7101P426-60	Screw	11	W10295996	Bracket, Saddle Valve	18	W10826749	Assembly, Tube (Right Front)
5	W10811211	Bracket, Hat	12	W10449143	Regulator, Pressure	19	W10826750	Assembly, Tube (Right Rear)
6	W10894861	Cover, Spark	13	W10140571	Seal, Switch Shaft			
7	W10475147	Module, Spark	14	W10859820	Harness, Switch			
8	7208P024-60	Seal, Manifold Pipe Inlet						
9	W10907218	Assembly, Manifold						

OPTIONAL PARTS NOT INCLUDED

ACCESSORIES

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	W10355016	Cleaner, Stainless Steel
	W10355010	Cleaner, Kitchen & Appliance