


The rating plate is located in one or more of the following places:

1. Attached to the underside of the drip tray
2. On the heat shield behind the front panel

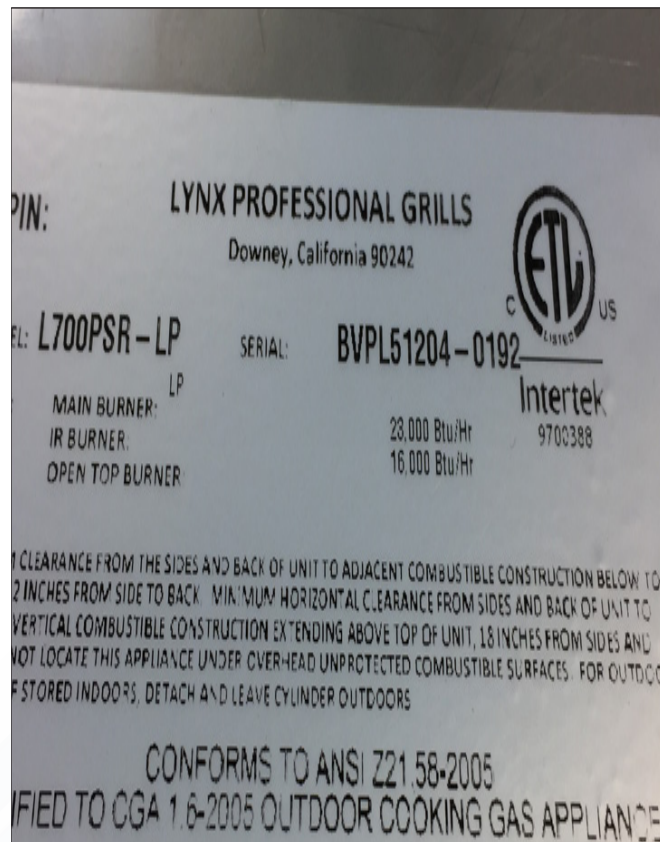

The Rating plate lists serial numbers, model numbers and gas type. This one is underneath the drip tray.