



30" Freestanding Stove

FFSGS6188-30

	PART NO.	ENGLISH NAME	QUANTITY
1	3A00125DDED02	TOP FACE	1
2	3E00501AEQ002	RUBBER FOR FACE FRINGE	1
3	3B00929ADB001	SIDE IRON GRID(DOUBLE HOLE)	2
4	3B00829ADB001	CAST IRON MIDDLE	1
5	3B00401ADB001	WOK ADAPTOR	1
6	3A02403ASG004	8F SHEET	1
7	3F02302AFA001	8F SUPPORTER L	1
8	3F02302AFA002	8F SUPPORTER R	1
9	3A02404ASG012	10F UPPER SHEET	1
10	3C00303CEP001	BURNER 60#	1
11	3C00303CEP002	BURNER 70#	1
12	3C00303CEP003	BURNER 100#	1
13	3C00304AEP002	BURNER 150#	1
14	3C00406BEP001	BURNER SPREAD 60#	1
15	3C00406BEP002	BURNER SPREAD 70#	1
16	3C00406BEP003	BURNER SPREAD 100#	1
17	3C00406DEP002	BURNER SPREAD 150#	1
18	3C00506ADH001	IRON CAP 60#	1
19	3C00506ADH002	IRON CAP 70#	1
20	3C00506ADH003	IRON CAP 100#	1
21	3C00506DDH001	IRON CAP 150# MIDDLE RING	1
22	3C00506DDH002	IRON CAP 150# OUTER RING	1
23	3C01402EAD002	500MM IGNITION SPARK TIP FOR DEFENDI BURNER	1
24	3C01402BAD015	500MM IGNITION SPARK TIP FOR SABAF BURNER	2
25	3C01402BAD016	800MM IGNITION SPARK TIP FOR SABAF BURNER	1
26	3C02202AAD001	SPARK TIP FIXER	3
	3C01901BAD006	NOZZLE \varnothing 0.65mm	1
	3C01901BAD042	NOZZLE \varnothing 0.83mm	3
	3C01901BAD014	NOZZLE \varnothing 0.90mm	1
	3C01901BAD003	NOZZLE \varnothing 0.52mm	1
27	3C01901BAD019	NOZZLE \varnothing 1.04mm	1
28	3C01901BAD024	NOZZLE \varnothing 1.25mm	3
29	3C01901BAD050	NOZZLE \varnothing 1.45mm	1
30	3C01901BAD011	NOZZLE \varnothing 0.80mm	1
31	2A02135DSG020	FRONT PANEL	1
32	3F05605AAE001	KNOB	6
33	3E01303AEQ001	KNOB AXIS	6
34	3E01507ASA001	KNOB BASE	6
35	3C00701CAD008	DOUBLE WAY VALVE	2
36	3C00601DAD013	SINGLE VALVE	3
37	2D0010USAC052	MAIN GAS PIPE	1
38	3E02801AAD004	Conector Gasket	2
39	3C05101AAA002	REGULATOR VALVE	1
40	201003A000001	CONNECTOR PIPE A	1
41	201003A000002	CONNECTOR PIPE A	1
42	201203A000001	CONNECTOR PIPE B	2
43	201503A000001	CONNECTOR PIPE D	1
44	3E01801AEQ001	POWER LINE FIXER	2
45	3H00302AAD001	WIRE CONNECTOR	1

46	3H00102BAD001	USA PLUG	1
	3H00202FAD007	POWER WIRE	1
	3H02301AAD005	GROUND WIRE	1
47	3H00704AEQ001	SQUARE SWITCH	1
48	203901A000001	LAMP SET	2
49	3H01604AAD004	Electric pipe (single ring)	1
50	3H01504AAD003	Electric pipe (double ring)	1
51	3C02602BAC001	Oven burner supporter	1
52	3C02602BAC002	Oven burner supporter	1
53	3H01901AAD005	CONVECTION FAN MOTOR	2
54	3H02001AAD005	COOLING FAN	1
55	3H03003AAD001	SNAP THERMOSTAT	1
56	3H01302AAD003	AC IGNITION	1
57	3A04003AAB001	IGNITION FIXER	2
58	3H00901AAD006	Electrial thermostat	1
59	3A13201AAB002	Thermostat sensor holder	1
60	3H00804AAD004	electric function switch	1
61	3H02401AAD006	Indicator	1
62	3A09506DSA003	SS COVER FOR DOOR	1
63	200706A00DE03	OVEN DOOR FRAME	1
64	3F00104AAF003	OVEN DOOR HINGE	2
65	202901C000002	HANDLE	1
66	3A35001AAB001	HANDLE GASKET	2
67	3G01101AAD002	WINDOW GLASS	1
68	3A27004AAB001	WINDOW GLASS CATCHER	2
69	3G00900USAA24	OVEN DOOR OUTER GLASS	1
70	3G00406BAD002	OVEN DOOR INNER GLASS	1
	3L00301AAD073	SCREW	4
71	3A020USASA004	DOWN DOOR OUTER SHEET	1
72	3A03602AAB003	SUPPORTER FOR DOWN DOOR	2
73	3E00405AER001	Silica gel particles	2
74	3A00205BDE003	MAIN DOOR	1
75	3A00304DDE004	OVEN BACK FRAME	1
76	3A02203ADE002	FAN COVER	1
77	3A00404ADE003	TOP SHEET	1
78	3K00103AAD002	BACK FIBER GLASS	1
79	3K00103AAD008	BOTTOM FIBER GLASS	1
80	3A45001AAB002	FIBER GLASS COVER BOARD	1
81	3A00604ADE001	INNER SIDE SHEET	2
82	3B02101AFA001	CHROME HANGER	2
83	3B00106DFA001	CHROME GRILL	3
84	3A01103ADE007	TRAY	1
85	3A22303CAB003	TOP SHEET FOR COOLING FAN	1
86	3A00505AAB002	INSULATION SHEET	1
87	202703A000001	FIBERGLASS GASKET	1
88	3K00101EAD002	FIBER GLASS	1
89	3F00203AAF002	OVEN DOOR HINGE BASE	2
90	3A00707GSA001	OUTER SIDE SHEET	2
91	3D00603ASG001	DECORATIVE SHEET	2
92	3A01405AAB003	BOTTOM SHEET	2
93	3A12603AAB001	EXTEND SHEET	2
94	3A01007CAB004	BACK COVER	1
95	3A22003AAB003	BOTTOM COVER	1
96	3A22002BAB001	DETACHABLE SHEET ON BACK COVER	1

97	3K01101AFA003	CHAIN	2
98	3A04407AAB001	LEG FIXER	2
99	3E00601HEQ001	LEG	4
100	3A03802AAB001	GAS PIPE FIXER	1

