



	PART NO.	Part NAME	QUANTITY
1	3A00125ADED01	TOP FACE	1
2	3E00501AEQ002	RUBBER FOR FACE FRINGE	1
3	3B00929ADB001	SIDE IRON GRID L	2
4	3B00929ADB002	SIDE IRON GRID R	1
5	3B01703ADB001	GRIDDLE	1
6	3B00401ADB001	Wok adaptor	1
7	3A02403ASG002	8F SHEET	1
8	3F02302AFA001	8F SUPPORTER L	1
9	3F02302AFA002	8F SUPPORTER R	1
10	3A02404ASG010	10F UPPER SHEET	1
11	3C00303CEP001	BURNER 60#	1
12	3C00303CEP002	BURNER 70#	2
13	3C00303CEP003	BURNER 100#	1
14	3C00305AEP001	FISH BURNER	1
15	3C00304AEP002	BURNER 150#	2
16	3C00406BEP001	BURNER SPREAD 60#	1
17	3C00406BEP002	BURNER SPREAD 70#	2
18	3C00406BEP003	BURNER SPREAD 100#	1
19	3C00406DEP002	BURNER SPREAD 150#	2
20	3C00410CEP001	FISH BURNER SPREAD	1
21	3C00506ADH001	IRON CAP 60#	1
22	3C00506ADH002	IRON CAP 70#	2
23	3C00506ADH003	IRON CAP 100#	1
24	3C00506DDH001	IRON CAP 150# MIDDLE RING	2
25	3C00506DDH002	IRON CAP 150# OUTER RING	2
26	3C00510BDH001	IRON CAP FISH OUTER	1
27	3C00510BSH002	IRON CAP FISH INNER	1
28	3C01402EAD002	500MM IGNITION SPARK TIP FOR DEFENDI BURNER	2
29	3C01402BAD015	500MM IGNITION SPARK TIP FOR SABAF BURNER	2
30	3C01402BAD016	800MM IGNITION SPARK TIP FOR SABAF BURNER	2
31	3C01402BAD002	800MM IGNITION SPARK TIP FOR FISH BURNER	1
32	3C02202AAD001	SPARK TIP FIXER	5
	3C01901BAD006	Nozzle $\varnothing$ 0.65mm	1
	3C01901BAD042	Nozzle $\varnothing$ 0.83mm	6
	3C01901BAD014	Nozzle $\varnothing$ 0.90mm	2
	3C01901BAD003	Nozzle $\varnothing$ 0.52mm	2
33	3C01901BAD019	Nozzle $\varnothing$ 1.04mm	1
34	3C01901BAD024	Nozzle $\varnothing$ 1.25mm	6
35	3C01901BAD050	Nozzle $\varnothing$ 1.45mm	2
36	3C01901BAD011	Nozzle $\varnothing$ 0.80mm	2
37	2A02135ASG013	FRONT PANEL	1
38	3F05605AAE001	KNOB	11
39	3E01303AEQ001	KNOB AXIS	11
40	3E01507ASA001	KNOB BASE	11
41	3C00601DAD013	SINGLE VALVE	5
42	3C00701CAD008	DOUBLE WAY VALVE	2
43	2D0010USAC063	MAIN GAS PIPE	1
44	3E02801AAD004	Conector Gasket	2
45	3C05101AAA002	REGULATOR VALVE	1
46	201003A000001	CONNECTOR PIPE A	1
47	201003A000002	CONNECTOR PIPE A	1
48	201203A000001	CONNECTOR PIPE B	2
49	201503A000003	CONNECTOR PIPE D	1

50	201503A000002	CONNECTOR PIPE D	1
51	201603A000002	CONNECTOR PIPE E	1
52	201404A000001	CONNECTOR PIPE G	1
53	201405A000001	CONNECTOR PIPE H	1
54	3E01801AEQ001	POWER LINE FIXER	3
55	3H00302AAD001	WIRE CONNECTOR	1
56	3H00102BAD001	USA PLUG	1
	3H00202FAD006	POWER WIRE	1
	3H02301AAD001	GROUND WIRE	1
	3H02301AAD005	GROUND WIRE	1
57	203901A000001	LAMP SET	3
58	3H01604AAD004	Electric pipe (single ring)	1
59	3H01504AAD003	Electric pipe (double ring)	1
60	3H01604AAD005	Electric pipe (single ring)	2
61	3C02602BAC001	Oven burner supporter	2
62	3C02602BAC002	Oven burner supporter	2
63	3H01901AAD005	CONVECTION FAN MOTOR	2
64	3H02001AAD005	COOLING FAN 35W	1
65	3H02001AAD006	COOLING FAN 25W	1
66	3H03003AAD001	SNAP THERMOSTAT	2
67	3H01302AAD001	AC IGNITION	1
68	3A04002AAB001	IGNITION FIXER	1
69	3H00901AAD006	Electrial thermostat	2
70	3A13201AAB002	Thermostat sensor holder	1
71	3H00804AAD005	electric function switch	1
72	3H00804AAD004	electric function switch	1
73	3H02401AAD006	Indicator	2
74	3A09506DSA002	SS COVER FOR DOOR 80	1
75	3A09506DSA004	SS COVER FOR DOOR 40	1
76	200706A00DE03	OVEN DOOR FRAME 80	1
77	200706A00DE06	OVEN DOOR FRAME 40	1
78	3F00104AAF003	OVEN DOOR HINGE	2
79	3F00104AAF005	OVEN DOOR HINGE(SPRING 3.2)	1
80	3F00104AAF006	OVEN DOOR HINGE(SPRING 4.0)	1
81	202901C000002	HANDLE	1
82	202901C000006	HANDLE	1
83	3A35001AAB001	HANDLE GASKET	4
84	3G01101AAD007	WINDOW GLASS	1
85	3G01101AAD003	WINDOW GLASS	1
86	3G00900USAA29	OVEN DOOR OUTER GLASS	1
87	3G00900USAA23	OVEN DOOR OUTER GLASS	1
88	3G00406BAD006	OVEN DOOR INNER GLASS	1
89	3G00406BAD002	OVEN DOOR INNER GLASS	1
	3L00301AAD073	SCREW	8
90	3A020USASA002	DOWN DOOR OUTER SHEET	1
91	3A03602AAB003	SUPPORTER FOR DOWN DOOR	2
92	3A03602AAB004	SUPPORTER FOR DOWN DOOR	1
93	3E00405AER001	Silica gel particles	4
94	3A00202BDE006	MAIN DOOR 80	1
95	3A00204BDE002	MAIN DOOR 40	1
96	3A00304DDE004	OVEN BACK FRAME	1
97	3A00304DDE001	OVEN BACK FRAME	1
98	3A46001AAB002	COVER FOR MOTOR HOLE	1
99	3A46002AAB001	COVER FOR HOLE	1

100	3A02203ADE002	FAN COVER	1
101	3A00404ADE003	TOP SHEET	1
102	3A00404ADE004	TOP SHEET	1
103	3A00604ADE001	INNER SIDE SHEET	4
104	3B02101AFA001	CHROME HANGER	4
105	3A31001AAB001	CONNECTOR FOR OVEN BACK FRAME	1
106	3A31002ADE001	CONNECTOR FOR MAIN DOOR	1
107	3B00106DFA001	CHROME GRILL 680	2
108	3B00106DFA003	CHROME GRILL 320	2
109	3A01103ADE007	TRAY 687	1
110	3A01101ADE010	TRAY	1
111	3A22303CAB003	TOP SHEET FOR COOLING FAN	1
112	3A22303CAB005	TOP SHEET FOR COOLING FAN	1
113	3A00505AAB003	INSULATION SHEET	1
114	202703A000001	FIBERGLASS GASKET	1
115	202703A000003	FIBERGLASS GASKET	1
116	3K00101EAD001	TOP FIBER GLASS	1
117	3K00101EAD002	TOP FIBER GLASS	1
118	3K00103AAD002	BACK FIBER GLASS	1
119	3K00103AAD011	BACK FIBER GLASS	1
120	3K00103AAD008	BOTTOM FIBER GLASS	1
121	3K00103AAD010	BOTTOM FIBER GLASS	1
122	3A45001AAB002	FIBER GLASS COVER BOARD	1
123	3A45001AAB003	FIBER GLASS COVER BOARD	1
124	3F00203AAF002	OVEN DOOR HINGE BASE	4
125	3A00707GSA003	OUTER SIDE SHEET	2
126	3A01405AAB009	BOTTOM SHEET	1
127	3D00603CSG001	DECORATIVE SHEET	2
128	3A12603AAB001	EXTEND SHEET	1
129	3A12603AAB002	EXTEND SHEET	1
130	3A01007CAB002	BACK COVER	1
131	3A22002BAB001	DETACHABLE SHEET ON BACK COVER	1
132	3A22003AAB006	BOTTOM COVER	1
133	3A04407AAB001	LEG FIXER SIDE	2
134	3A04407AAB002	LEG FIXER MIDDLE	1
135	3E00601HEQ001	LEG	6
136	3A03802AAB001	GAS PIPE FIXER	1
137	3A12501AAB010	DOWN DOOR SUPPORTER	1
138	3H00704AEQ001	SQUARE SWITCH	2
139	3K01101AFA003	CHAIN	2
140	3A01405AAB003	BOTTOM SHEET	1
141	3A01405AAB006	BOTTOM SHEET	1
142	3A27004AAB001	WINDOW GLASS CATCHER	4