















29

28

27

26

25

24

23



FFSEL6012-30S

NO.	Part Name	Part Code	Qty.
Part of Inside & Font of the range			
1	Lower gusset plate	30306400041	1
2	Oven baffle	30316200006	1
3	Oven plate	30302900238	1
4	Oven auxiliary plastic parts	30204100032	2
5	Door seal strip	30200500040	1
6	Liner panel	30315000487	1
7	shelf	30400100002	2
8	Back electric heat pipe baffle	30301100083	1
9	Circulating fan group	30100300051	1
10	Electric heating tube	30101200279	1
11	Standing oven liner assembly	2040700283	1
12	Round lamp assembly	30101000013	2
Parts of the Back of the range			
13	Post-liner support	30301500004	1
14	Cooker junction box	30102600008	1
15	Oven stand	30313200001	1
16	Inner bladder left and right support	30302500005	1
17	Inner bladder left and right support	30302500006	1
18	Oven holder	30313300001	2
19	Housing rear panel	30302200143	1
20	Oven holder	30313300007	1
21	Oven plate	30302900017	1
22	Cover plate	30309600013	1

Parts of Bottom of the Range			
23	Non-slip foot	30201600011	4
24	Oven stand	30313200090	2
25	Oven connecting plate	30302700162	2
26	Inner bin damper	30307800016	1
27	Bottom electric heat pipe fixing plate	30301200002	1
28	Electric heating tube	30101200281	1
29	Oven baffle	30316200003	1
Parts of Cooktop & Top of Oven Cavity			
30	Exhaust duct	30401100007	1
31	Flue bottom plate	30301800002	1
32	Cooling thermostat	30100800005	1
33	Cooling fan group	30100400074	1
34	Overheat protector	30100700030	1
35	Exhaust cover plate	30312600036	1
36	Exhaust cover plate	30312600038	1
37	Oven plate	30302900312	1
38	Base plate	30300500025	1
39	Pilot lamp	30102500068	1
40	Indicator holder	30307500002	1
41	Radiating hot plate fixing seat	30307400002	12
42	Radiant hearth	30102800068	1
43	Radiant hearth	30102800067	1
44	Radiant hearth	30102800069	2

45	Standing oven panel assembly	2040500252	1
46	Cooktop glass panel	30502201196	1
47	Rear panel	30306200014	1
Parts for sides of range			
48	Shell left and right side panels	30302300153	1
49	Non-standard screw	30406900036	2
50	Housing brackets	30302400005	1
51	Oven plate	30302900308	2
52	Hinged plate	30302600037	2
53	Hinged plate	30302600003	2
54	Housing brackets	30302400006	1
55	Shell left and right side panels	30302300152	1
The parts list of door			
1	Handle SS	30400700297	1
	Handle Brass	30400700298	1
2	Large oven decoration strip	30307900163	1
3	Door panel glass	30500201175	1
4	Oven holder	30313300065	2
5	Door frame left and right brackets	30303400193	1
6	Door frame left and right brackets	30303400194	1
7	Inner glass retaining block	30200900018	1
8	Inner glass retaining block	30200900019	1
9	hinge	30400600055	2

10	Intermediate glass	30500300088	1
11	Intermediate glass limit block	30303700002	2
12	Intermediate glass retaining block	30201000008	2
13	Inner glass	30500400155	1
14	Handle washer	30201400005	2
15	Handle fixing plate	30303600001	1
16	Middle glass panel	30201200006	0,01
17	Intermediate glass retaining block	30201000003	2
18	Door bracket	30303500102	1
The parts list of control panel			
1	Timer Control knob brass	30402500457	1
1	Timer Control knob SS	30402500450	1
2	Cooktop Element knob brass	30402500461	4
2	Cooktop Element knob SS	30402500454	4
3	Oven Function knob brass	30402500462	1
3	Oven Function knob SS	30402500455	1
4	Oven Temperature knob brass	30402500463	1
4	Oven Temperature knob SS	30402500456	1
5	Knob base brass	30402500465	7
5	Knob base SS	30402500464	7
6	Control Panel	30305900470	1

7	Rubber strip	30215300008	1
8	Control Panel left and right side panels	30216300015	1
9	Panel left and right side panels	30216300014	1
10	Mechanical timer	30100100001	1
11	Cooktop Heating Element control switch	30102200029	4
12	Oven Function switch	30100500064	1
13	Oven Temperature Control Switch	30100900013	1
14	Lamp indicator	30102500003	1
Connecting wire Not Shown in the plan			
1	Connecting wire, 4-eye single- loop electric ceramic furnace, cable set	30102101245	1
2	Connecting wire, parallel 7 function, set wire, oven part	30102101246	1