

New Part Number	Description	Old Part Number
Bosch 00665515	Control Unit	665515
Bosch 00496013	Dishwasher Control Module	496013
Bosch 00676935	CONTROL UNIT	676935
Bosch 00676961	Controller Unit	665410
Bosch 00486752	Display Control Unit	486752
Bosch 00496012	Control Unit	496012
Bosch 00665878	Control UniT	665878
Bosch 00668952	Control Unit	668952
Bosch 00676960	Control Unit	676960
Bosch 00676962	Control Unit	676962, 665411
Bosch 643578	Control Unit	
Bosch 00647476	Control Unit	647476
Bosch 00671729	Display Module	640299, 671729
Bosch 00660486	Control Unt	660486
Bosch 00676964	Control Unit	676964, 643487
Bosch 00143695	Control Unit	143695
Bosch 12022212	Module Control	648782, 00648782
Bosch 670944	Control Module	
Bosch 00264461	Control Module	264461
Bosch 00655356	Module Control	655356, 650443
Bosch 00660487	Motor	660487
Bosch 00436440	Pump Drain	436440
Bosch 00442548	Pump Circulating	442548
Bosch 00665510	Circulation Pump	665510
Bosch 00642239	Pump Drain	642239
Bosch 00167082	Drain Pump	167082
Bosch 00668400	OPERATING MODULE	668400
Bosch 00640685	Operating Module	640685
Bosch 00668402	Operating Module	668402
Bosch 00653424	Display Module	653424, 499395, 675130, 00675130
Bosch 00494781	Display Module	494781
Bosch 00671729	Display Module	671729
Bosch 00486915	Display	486915
Bosch 00645106	PC Board	645106
Bosch 00666285	PC Board	666285
Bosch 00666283	PC Board	666283
Bosch 00618624	Ignition Device	418572, 618624